



ELECTRONICS
DESIGN &
MANUFACTURING

Solution 6 + 6 Wireless - AE Operators Manual

ISSUE 1.10



Solution 6+6 Wireless - AE

Operators Manual

Copyright © 1997 by Electronics Design and Manufacturing Pty Limited,
SYDNEY, AUSTRALIA

Document Part Number MA6600

Document ISSUE 1.10

Printed 02 December 1997

This documentation is provided to suit *Solution 6+6 Wireless - AE*

Control Panel (CC660/LP660)

Firmware Revision 1.00 – 1.02

Hardware Revision A

Copyright Notice

All rights reserved. No part of this publication may be reproduced, transmitted or stored in a retrieval system in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Electronics Design and Manufacturing Pty Limited.

Trademarks

Throughout this document trademark names may have been used. Rather than put a trademark symbol in every occurrence of a trademark name, we state that we are using the names only in an editorial fashion and to the benefit of the trademark owner with no intention of infringement of the trademark.

Notice of Liability

While every precaution has been taken in the preparation of this document, neither Electronics Design and Manufacturing Pty Limited nor any of its official representatives shall have any liability to any person or entity with respect to any liability, loss or damage caused or alleged to be caused directly or indirectly by the information contained in this book.

Electronics Design and Manufacturing Pty Limited reserves the right to make changes to features and specifications at any time without prior notification in the interest of ongoing product development and improvement.

Table Of Contents

Introduction	9
Features	10
Basic System Operation	11
Code Retries	12
Codepad Lockout Time	12
Codepad Extinguish Mode	12
Alarm Memory	13
Sensor Watch Time	13
Day Alarm	14
Day Alarm Resetting	14
Day Alarm Latching	14
Operation.....	14
Entry Time	15
Exit Time	15
System Date and Time	15
User Codes 1 - 8	16
User Codes 9 – 16	16
User Code Priority.....	17
System Indicators and Operations	19
CP5 Eight Zone Codepad	19
Zone Indicators.....	19
AWAY Indicator.....	19
STAY Indicator.....	19
MAINS Indicator.....	20
FAULT Indicator.....	20
Audible Indicators.....	20
CP5 Eight Zone LCD Codepad	21
Zone Indicators.....	21
AWAY Indicator.....	21
STAY Indicator.....	21
System Disarmed.....	22
MAINS Indicator.....	22
Zone Isolating Mode.....	22
FAULT Indicator.....	22
Programming Mode.....	22
Off Indicator/Zone Sealed.....	23
On Indicator/Zone In Alarm.....	23
Audible Indicators.....	23
System Operations	24
Arming The System In AWAY Mode	24
Disarming The System From AWAY Mode	25
Arming The System In STAY Mode	25
Disarming The System From STAY Mode	27
Codepad Functions	28
Isolating Zones	29
Standard Isolating	29
Code To Isolate	30

<i>Fault Analysis Mode</i>	31
Fault Descriptions	32
Low Battery	32
Date and Time.....	32
Sensor Watch.....	32
Horn Speaker Monitor.....	32
Reserved	32
E ² Fault.....	32
Zone Transmitter Low Battery	33
Communication Failure	33
AC Mains Failure.....	33
Codepad Duress Alarm	34
Codepad Panic Alarm	34
Codepad Fire Alarm	34
Codepad Medical Alarm	34
<i>Remote Radio Transmitter Operation</i>	35
Arming Via Transmitter In AWAY Mode.....	35
Disarming Via Transmitter From AWAY Mode.....	35
Arming Via Transmitter In STAY Mode.....	36
Disarming Via Transmitter From STAY Mode	36
Panic Alarm Via Transmitter	36
Turning An Output On Via Transmitter	36
Turning An Output Off Via Transmitter.....	36
<i>Master Code Functions</i>	37
Arm Or Disarm Both Areas At The Same Time	37
Changing and Deleting User Codes.....	38
Changing and Deleting Radio Remote User Codes.....	40
Changing Domestic Phone Numbers.....	42
Event Memory Recall Mode	44
Walk Test Mode.....	45
Fault Analysis Mode.....	46
Setting The Date and Time	47
Turning Day Alarm On and Off	47
Reset Latching Outputs	48
Initiate A Modem Call.....	48
<i>User Code Functions – Partitioned Systems Only</i>	49
Arm Or Disarm Both Areas At The Same Time	49
Hold Down Functions	50
Arm The System In AWAY Mode.....	50
Arm The System In STAY Mode.....	50
Horn Speaker Test.....	50
Bell Test	50
Strobe Test.....	51
Turning Day Alarm On and Off	51
Fault Analysis Mode.....	52
Initiate A Modem Call.....	52
Reset Latching Outputs	52
Codepad ID and Beeper Tone Change	53
Initiate A Test Report.....	53
<i>Partitioning</i>	54
<i>Operating Codepads When Partitioned</i>	56
<i>Communication Options</i>	57
Remote Arming Via The Telephone	58
Domestic Dialling Reporting	59
Basic Pager Reporting	60

***Optional Equipment*..... 61**
***Glossary Of Terms* 63**
***Warranty* 66**
 Limitations 67
 Maintenance 67
 Specifications 68
 Advice To Users 69
 New Zealand Telepermit Notes 69
 Quality Policy 70
***Installation Notes*..... 71**
***Service Notes*..... 74**
***Index* 77**

Introduction

Congratulations on selecting the *Solution 6+6 Wireless - AE* control panel to protect you and your property. So that you can obtain the most from your unit, we suggest that you take the time to read through this manual and familiarise yourself with the numerous outstanding operating features of this system.

You will notice that in all aspects of planning, engineering, styling, operation, convenience and adaptability, we have sought to anticipate your every possible requirement. Programming simplicity and speed have been some of the major considerations and we believe that our objectives in this area have been more than satisfied.

This manual will explain all aspects of operating the control panel. All system parameters and options are detailed, however suitability is left up to the individual. Every system can be tailored to meet all requirements quickly and easily.

The *Solution* range of control panels are very popular with thousands of people throughout many countries of the globe, all of whom have various levels of technical aptitude and ability. We have tried to aim this manual at all levels of readers.

As *Solution* control panels continue to be improved over the years, they have become very powerful. Some of its early first-time users have advanced to true "power users" and we need to address their needs too, while maintaining the simplicity of the manual and the product.

This operators manual is intended for BOTH the *Solution 6+6 Wireless - AE* Dialler (CC660) and *Solution 6+6 Wireless - AE* Local (LP660) panels. If you have a local panel (LP660), disregard all references and features in this manual which involve telephone dialling.

Features

The *Solution 6+6 Wireless - AE* control panel uses the very latest in microprocessor technology to provide you with more useful features and superior reliability and performance.

Following is a list of the main features that the control panel will provide.

- Eight Programmable User Codes
- Eight Radio Remote User Codes
- STAY Mode and AWAY Mode Operation
- Entry and Exit Warning Beeper
- Six Programmable Burglary Zones (Wireless Or Hard Wired)
- Six 24 Hour Tamper Zones
- Partitionable To 2 Areas
- Zone Lockout
- Sensor Watch
- Day Alarm
- Dynamic Battery Testing
- Remote Arming
- Answering Machine Bypass
- AC Fail and System Fault Indicators
- Event Memory Recall
- Walk Test Mode
- Upload/Download Programmable
- Monitored Siren Output
- Strobe Output
- Relay Output
- EDMSAT – Satellite Siren Compatible
- Separate Fire Alarm Sound



One option that can be programmed by your installer will prevent another installer or technician from performing any service to your system. This should be discussed with your installer.

Refer to "Optional Equipment" on page 61 for more information on accessories and other features that can be used with your system.

Basic System Operation

The overall purpose of your alarm system is to deter any would be intruder from entering your premises.

Before leaving your home or office, make sure all windows and doors are closed. Enter your designated **CODE** followed by the **AWAY** button. Your alarm system will now arm in AWAY Mode and commence counting down the exit time.

After the exit time has expired, you will hear one long beep at the remote codepad to indicate that the system has been armed in AWAY Mode. Any unsealed zones will be automatically isolated. The control panel is now ready to activate the sirens and strobe lights should an alarm occur.

If a zone that is sealed has triggered after exit time has expired, a number of events will occur. Following is a typical sequence of events.

1. The control panel will activate any audible devices such as sirens, flashing blue strobe light and the communications dialler.
2. The communication dialler will transmit all relevant alarm information via the telephone line alerting the respective persons of the current state of events.
3. The siren timer will commence counting down as soon as an alarm occurs. When the siren run time expires, the siren will automatically reset and be placed into a ready state for the next alarm.
4. Upon your return, the blue strobe light may still be operating to inform you that there has been an alarm.
5. One or a number of zone indicators will be flashing, allowing you to identify the particular zone(s) that caused the alarm condition.

This is a very basic outline of the general system operation. As there are many features available in the *Solution 6+6 Wireless - AE* control panel, there could be numerous variations from the above sequence.

Code Retries

Code retries restricts the amount of times an invalid user code can be used in an attempt to operate the system. An alarm caused by this is known as a "Codepad Tamper Alarm". When a codepad tamper alarm occurs, the system will carry out the following events;

1. Activate the sirens and strobe connected to the control panel. Contact your installer if you require this to be silent.
2. Shutdown all codepads that are connected and automatically disable them from operating the system. Your installer programs the length of time they are disabled for.
3. Send an "Access Denied" report to the base station receiver (Optional).

This function operates when the system is in the armed or disarmed state. Each time the system is armed or disarmed, the code retry counter will be reset. The number of incorrect code attempts can be anywhere between 1 to 15. This value is programmed by your installer. Refer to the "Installation Notes" on page 71 for the number of code retries set by your installer.

Codepad Lockout Time

The codepad will be locked out for the time programmed by your installer if the wrong code has been entered more times than allowed by the code retry attempts.

Codepad Extinguish Mode

This option when programmed by your installer will allow the indicators on your codepad to automatically extinguish when the codepad is not used for a period of sixty seconds.

The indicators will illuminate once a button has been pressed on the remote codepad, when an alarm has occurred or when the systems entry time has been activated. The indicators will not illuminate when a silent alarm has been triggered. This option can only be programmed by your installer.

Alarm Memory

If you return to your premises and you notice the strobe light flashing, then care should be taken as this indicates that there has been an alarm condition while you were away.

When you enter the building and disarm the system, you will notice one or a number of zone indicators flashing rapidly. This indicates that the zone(s) in question have triggered into alarm.

If the zone indicator is flashing fast (On 0.25 sec/Off 0.25 sec), this indicates that one of the 6 burglary zones has activated into alarm. If the zone indicator is flashing very fast (On 0.1 sec/Off 0.1 sec), then this indicates that one of the 6 tamper zones has activated into alarm. You should take note of this information so that it can be passed onto your installer should they require it.

It is also possible to interrogate your alarm system using the event memory recall function. This will allow you or your installer to interpret the exact sequence of events that had occurred. Refer to "Event Memory Recall Mode" on page 44 for more information.

Sensor Watch Time

Sensor watch is part of the control panel's watchdog circuitry. It is a feature designed to ensure that all your detection devices are working correctly.

Sensor watch time determines how many days (0-99) a zone may remain sealed before registering as a fault. This feature is only active while the system is in the disarmed state because while your system is armed, the detection devices are on stand-by waiting to be activated.

If a zone programmed for sensor watch has not triggered and reset during this time, the FAULT indicator will illuminate and the codepad will beep once every minute. To cancel the codepad beeping once every minute, press the **AWAY** button. Refer to "Fault Descriptions" on page 32 for more information. Refer to "Installation Notes" on page 71 for the sensor watch time set by your installer.

Day Alarm

Day alarm may be used to monitor the front door of a shop or a pool gate. Day alarm enables a combination of zones to be monitored while the system is in the disarmed state. An indication is available via any of the programmable outputs including the codepad buzzer. Only zones 1 - 4 may be used as day alarm monitored zones. Refer to the "Installation Notes" on page 71 to check which zones have been allocated to operate for day alarm.

Day Alarm Resetting

An output that has been programmed for day alarm resetting will operate when a zone selected for day alarm is triggered. The output will reset when the zone returns to normal. This can only occur when the system is disarmed.

Day Alarm Latching

An output that has been programmed for day alarm latching will operate when a zone selected for day alarm is triggered. The output will reset when the **AWAY** button has been pressed. This can only occur when the system is disarmed.

Example

If you have multiple zones programmed for day alarm and one of them has triggered, it is difficult to know which zone caused the alarm. Using the option of day alarm latching will solve the problem. When a day alarm zone triggers, all zone indicators are turned off leaving only the zone or zones that caused the day alarm illuminated. To clear the day alarm memory, press the **AWAY** button.

Operation

Day alarm is turned on and off by holding the **4** button down for two seconds or alternatively, you may enter the **MASTER CODE** followed by **7** and the **AWAY** button. Refer to "Hold Down Functions" on page 50 for more information. Three beeps indicate that day alarm is turned on, two beeps indicate that day alarm is turned off.

If a zone has been programmed for day alarm, it can be isolated in the normal way. The isolated zone therefore will not register as a day alarm zone.

Entry Time

Entry time is the amount of time allowed to disarm your system after you have opened the entry delay zone. During the entry time, the codepad buzzer will beep twice per second warning you to disarm your system. An alarm will activate if you do not disarm your system before the entry time expires. Refer to the "Installation Notes" on page 71 for the entry time set by your installer.

Exit Time

Exit time is the amount of time you have to leave your premises after you have entered your code to arm the system. You will hear a long beep from the codepad to indicate the end of exit time. Make sure you exit your premises before this time expires. Refer to "Installation Notes" on page 71 for the programmed exit time set by your installer.

System Date and Time

The control panel has a real time 12 month calendar and 24 hour clock that needs to be set and changed for daylight savings. This will allow the system to log events and send test reports with accurate time stamping if programmed. Refer to "Master Code Functions" on page 37 for more information on setting the date and time.

User Codes 1 - 8

The purpose of user codes is to arm and disarm the system as well as perform other specific functions as described in the Master Code Functions on page 37.

User codes can be any length between one to four digits long. Each user code can have a different priority level allocated to it. This controls the behaviour of the code, allowing it to arm only or to arm and disarm etc.

There are a total of 8 user codes available that can be altered or deleted at any time by a Master Code holder. Multiple Master Codes may be programmed.

Refer to “Changing and Deleting User Codes” on page 38 for more information on adding, deleting or changing user codes.



The priority level for each user code can only be programmed or changed by the installer.

User Codes 9 – 16

The control panel has the ability to be remotely armed and disarmed via remote radio transmitters. Up to eight remote user codes may be allocated for radio transmitter operation. Before the control panel will accept radio On/Off signals, you must teach the control panel which transmitter is used for each user code. User codes 9 – 16 do not have any priority level allotted to them and simply act as arm/disarm user codes.

Teaching Radio User Codes

Teaching radio user codes can only be carried out using the Master Code. Refer to “Changing and Deleting Radio Remote User Codes” on page 40 for more information.

User Code 32 will report to the monitoring company when any of the following methods for arming and disarming are used.

1. Arm and disarm via a keyswitch zone or the optional Radio Key/Keyswitch Interface or Night Arm Station.
2. Arm the system remotely over the telephone.
3. Single button arming in AWAY Mode or STAY Mode.
4. Single button disarming from STAY Mode.

User Code Priority

There are seven different priority levels that can be allocated to the user code. Each priority level allows or restricts the functions that different user code holders may perform.



If user code priority levels 4, 6 or 12 have been programmed to any of the available 8 user codes, the method of standard isolating will no longer operate. Only those user codes with the priority level of 4, 6 or 12 will be able to isolate zones using the method code to isolate.

Priority	Description
0	Arm and Disarm
1	Arm Only
2	Patrolman Code
4	Arm and Disarm + Code To Isolate
6	Patrolman Code + Code To Isolate
8	Arm and Disarm + Master Code Functions
12	Arm and Disarm + Master Code Functions + Code To Isolate

Table 1: User Code Priority Levels

Arm and Disarm

0 This priority level allows the user code holder to arm and disarm the system.

Arm Only

1 This priority level allows the user code holder to arm the system but not disarm it.

Patrolman Code

2 This priority level allows the patrolman to disarm the system only after an alarm has occurred. This will prevent unauthorised use of the code. A patrolman code can always arm the system.

Arm and Disarm + Code To Isolate

4 This priority level allows the user code holder to arm and disarm the system.

Isolating of zones will only be allowed by using the method “Code To Isolate” once this priority level has been set. Refer to Isolating Zones on page 29 for more information.

Patrolman Code + Code To Isolate

6 This priority level allows the patrolman to disarm the system only after an alarm has occurred. This will prevent unauthorised use of the code. A patrolman code can always arm the system.

Isolating of zones will only be allowed by using the method “Code To Isolate” once this priority level has been set. Refer to Isolating Zones on page 29 for more information.

Arm and Disarm + Master Code Functions

- 8 This priority level allows arming and disarming of the system and the ability to carry out any of the Master Code Functions described on page 37. More than one user code can be allocated to this priority level.


Arm and Disarm + Master Code Functions + Code To Isolate

- 12 This priority level allows arming and disarming of the system and the ability to carry out any of the Master Code Functions described on page 37.

Isolating zones will only be allowed by using the method "Code To Isolate" once this priority level has been set. Refer to Isolating Zones on page 29 for more information. More than one user code can be allocated to this priority level.

System Indicators and Operations

CP5 Eight Zone Codepad

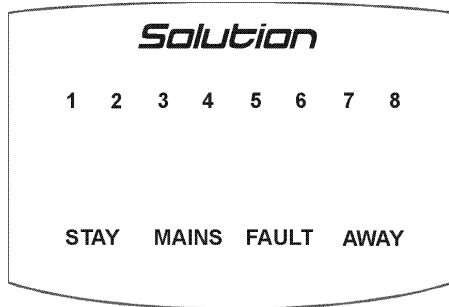

The codepad is the communications interface between you and your alarm system. It allows you to issue commands and offers both visual and audible indications that guide you through the general operation.

The codepad incorporates numerous indicators. There are ZONE indicators which are used to show the condition of each zone and four others for general status. The following is a list of situations and the relevant indications that will be seen.

Figure 1: CP5 Eight Zone Codepad

Zone Indicators

The ZONE indicators are used to show the status of the zones. The following table lists the various circumstances that the indicators will display (ie. Zone Sealed, Zone Unsealed).

<i>Indicator</i>	<i>Definition</i>
On	Zone Is Unsealed
Off	Zone Is Sealed
Flashing Very Fast (0.1 Sec On – 0.1 Sec Off)	24 Hour Tamper Zone In Alarm Condition
Flashing Fast (0.25 Sec On – 0.25 Sec Off)	Zone Is In Alarm Condition
Flashing Slow (1 Sec On – 1 Sec Off)	Zone Is Manually Isolated
Flashing Very Slow (2 Sec On – 1 Sec Off)	24 Hour Tamper Zone In The Unsealed State

Table 2: Zone Indicators

AWAY Indicator

The AWAY indicator is used to inform you that the system is armed in the AWAY Mode.

<i>Indicator</i>	<i>Definition</i>
On	System Is Armed In AWAY Mode
Off	System Is Not Armed In AWAY Mode

Table 3: AWAY Indicator

STAY Indicator

The STAY indicator is used to indicate that the system is armed in STAY Mode.

<i>Indicator</i>	<i>Definition</i>
On	System Is Armed In STAY Mode
Off	System Is Not Armed In STAY Mode
Flashing	System Is In Isolating Mode

Table 4: STAY Indicator

MAINS Indicator

The MAINS indicator is used to indicate that the systems AC mains supply is normal or has failed.

<i>Indicator</i>	<i>Definition</i>
On	AC Mains Power Normal
Flashing	AC Mains Failure

Table 5: MAINS Indicator

FAULT Indicator

The FAULT indicator is used to indicate that the system has detected a system fault. Refer to "Fault Analysis Mode" on page 31 for more information on system faults.

<i>Indicator</i>	<i>Definition</i>
On	There Is A Fault That Needs To Be Rectified
Off	The System Is Normal, There Are No Faults
Flashing	There Is A Fault Waiting To Be Acknowledged

Table 6: FAULT Indicator


Audible Indicators

In general, the audible indications given out by the codepad are as follows:

<i>Indicator</i>	<i>Definition</i>
One Short Beep	A Button Has Been Pressed On The Codepad Or End Of Exit Time When Armed In STAY Mode
Two Short Beeps	The System Has Accepted Your Code
Three Short Beeps	The Requested Function Has Been Executed
One Long Beep	Indicates End Of Exit Time For AWAY Mode Or The Requested Operation Has Been Denied Or Aborted
One Short Beep Every Second	Walk Test Mode Is Active
One Short Beep Every Minute	There Is A Fault Waiting To Be Acknowledged

Table 7: Audible Indications

CP5 Eight Zone LCD Codepad

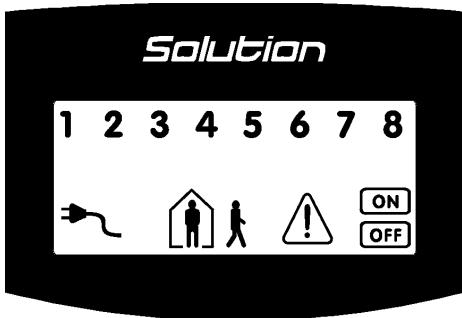

The codepad is the communications interface between you and your alarm system. It allows you to issue commands and offers both visual and audible indications that guide you through the general operation.

The codepad incorporates numerous indicators. There are ZONE indicators which are used to show the condition of each zone and four others for general status. The following is a list of situations and the relevant indications that will be seen.

Figure 2: CP5 Eight Zone LCD Codepad

Zone Indicators

1 2 3

The ZONE indicators are used to show the status of the zones. The following table list the various circumstances that the indicators will display (ie. Zone Sealed, Zone Unsealed).

Indicator	Definition
On	Zone Is Unsealed
Off	Zone Is Sealed
Flashing Very Fast (0.1 Sec On – 0.1 Sec Off)	24 Hour Tamper Zone In Alarm Condition
Flashing Fast (0.25 Sec On – 0.25 Sec Off)	Zone Is In Alarm Condition
Flashing Slow (1 Sec On – 1 Sec Off)	Zone Is Manually Isolated
Flashing Very Slow (2 Sec On – 1 Sec Off)	24 Hour Tamper Zone In The Unsealed State

Table 8: Zone Indicators

AWAY Indicator



The AWAY indicator illuminates when the system is armed in the AWAY Mode. The **ON** indicator will also illuminate when the system is armed in the AWAY Mode.

Indicator	Definition
On	System Is Armed In AWAY Mode
Off	System Is Not Armed In AWAY Mode

Table 9: AWAY Indicator

STAY Indicator




The STAY indicator illuminates when the system is armed in STAY Mode. The **ON** and **OFF** indicators will also illuminate when the system is armed in the STAY Mode.

Indicator	Definition
On	System Is Armed In STAY Mode
Off	System Is Not Armed In STAY Mode
Flashing	System Is In Isolating Mode

Table 10: STAY Indicator

System Disarmed

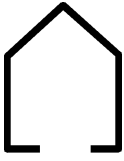

This indicator will illuminate when the system has been disarmed. The **OFF** indicator will also illuminate when the system has been disarmed.

MAINS Indicator



The MAINS indicator is used to indicate that the systems AC mains supply is normal or has failed.

Indicator	Definition
On	AC Mains Power Normal
Flashing	AC Mains Failure

Table 11: MAINS Indicator

Zone Isolating Mode



Flashing

This indicator will illuminate when you attempt to isolate zones. The person will flash once every 3 seconds.

FAULT Indicator



The FAULT indicator is used to indicate that the system has detected a system fault. Refer to "Fault Analysis Mode" on page 31 for more information on system faults.

Indicator	Definition
On	There Is A Fault That Needs To Be Rectified
Off	The System Is Normal, There Are No Faults
Flashing	There Is A Fault Waiting To Be Acknowledged

Table 12: FAULT Indicator

Programming Mode



Flashing

This indicator will illuminate when the system has entered the operators programming mode (ie Master Code Functions). Both persons will flash.

Off Indicator/Zone Sealed



The **OFF** indicator will illuminate when the system is in the disarmed state and will flash when a zone becomes unsealed. It will stop flashing when all zones are sealed.

On Indicator/Zone In Alarm



The **ON** indicator will illuminate when the system is armed in the AWAY Mode and will flash when an alarm occurs. The indicator will reset once a valid user code has been entered.



Both the **OFF** and **ON** indicators will illuminate when the system has been armed in STAY Mode.

Audible Indicators

In general, the audible indications given out by the codepad are as follows:

<i>Indicator</i>	<i>Definition</i>
One Short Beep	A Button Has Been Pressed On The Codepad Or End Of Exit Time When Armed In STAY Mode
Two Short Beeps	The System Has Accepted Your Code
Three Short Beeps	The Requested Function Has Been Executed
One Long Beep	Indicates End Of Exit Time For AWAY Mode Or The Requested Operation Has Been Denied Or Aborted
One Short Beep Every Second	Walk Test Mode Is Active
One Short Beep Every Minute	There Is A Fault Waiting To Be Acknowledged

Table 13: Audible Indications

System Operations

The following pages will describe how to use and interpret the many codepad functions that are available on the *Solution 6+6 Wireless - AE* control panel.

Arming The System In AWAY Mode

There are two methods for arming your system in the AWAY Mode. Method one is standard and will always operate. Method two is optional and requires to be programmed by your installer.



Single button arming in AWAY Mode will report as user code number 32.

Method One

How To Arm The System In AWAY Mode

1. Enter your **CODE** followed by the **AWAY** button.
Two beeps will be heard and the AWAY indicator will illuminate. Exit time will now commence.



Method Two

How To Arm The System In AWAY Mode

1. Hold down the **AWAY** button until two beeps are heard.
The AWAY indicator will illuminate and exit time will now commence.

If a zone is not sealed at the end of exit time, the zone will be automatically isolated. The zone will become an active part of the system again as soon as it has resealed (ie. If a window is left open after exit time has expired, the window will not be an active part of the system until it has closed. Opening the window after exit time has expired will cause an alarm condition).

Forced Arming

The feature of arming the system when a zone is not sealed is known as forced arming.

If the AWAY indicator does not illuminate and a long beep is heard when you attempt to arm the system, forced arming is not permitted. If this is the case you must ensure that all zones are sealed or manually isolated before you can arm the system.

Disarming The System From AWAY Mode

How To Disarm The System From AWAY Mode

1. Enter your **CODE** followed by the **AWAY** button.
Two beeps will be heard and the AWAY indicator will extinguish. A flashing ZONE indicator represents a previous alarm on that zone.



Arming The System In STAY Mode

STAY Mode is when the system has been armed with particular zones automatically isolated. These zones must be programmed by the installer.

When there is a need to arm only the system perimeter, this mode is extremely handy. It automatically disables the interior detection zones allowing movement within the protected area while at the same time arming the perimeter zones.

There are two methods for arming your system in STAY Mode. Method one is standard and will always operate. Method two is optional and needs to be programmed by your installer.



Single button arming in STAY Mode will report as user code number 32.

Method One

How To Arm The System In STAY Mode


1. Enter your **CODE** followed by the **STAY** button.
Two beeps will be heard and the STAY indicator will illuminate. Exit time will now commence.

Any zones that have been programmed for STAY Mode will be automatically isolated and their respective indicators will begin to flash until exit time expires. At the end of exit time, the ZONE indicators will extinguish and the codepad will give one short beep.



Method Two

How To Arm The System In STAY Mode

1. Hold down the  button until two beeps are heard.
The STAY indicator will illuminate and exit time will now commence.

Any zones that have been programmed for STAY Mode will be automatically isolated and their respective indicators will begin to flash until exit time expires. At the end of exit time, the ZONE indicators will extinguish and the codepad will give one short beep.



If a zone is not sealed at the end of exit time, the zone will be automatically isolated. The zone will become an active part of the system again as soon as it has resealed (ie. If a window is left open after exit time has expired, the window will not be an active part of the system until it has closed. Opening the window after exit time has expired will cause an alarm condition).

Forced Arming

The feature of arming the system when a zone is not sealed is known as forced arming.

If the STAY indicator does not illuminate and a long beep is heard when you attempt to arm the system, forced arming is not permitted. If this is the case you must ensure that all zones are sealed or manually isolated before you can arm the system.

Disarming The System From STAY Mode

There are two methods for disarming the system from STAY Mode. Method one is standard and will always operate. Method two is optional and requires to be programmed by your installer.

Method One

How To Disarm The System From STAY Mode

1. Enter your **CODE** followed by the **STAY** button.
Two beeps will be heard and the STAY indicator will extinguish. A flashing ZONE indicator represents a previous alarm on that zone.



Method Two

A flashing ZONE indicator represents a previous alarm on that zone. If this is the case, a valid user code will need to be used to disarm the system.



Single button disarming from STAY Mode will report as user code number 32.

How To Disarm The System From STAY Mode

1. Hold down the **STAY** button until two beeps are heard.
The STAY indicator will extinguish and the system will disarm.



Codepad Functions

The following pages will describe how to use and interpret the many codepad functions that are available on the *Solution 6+6 Wireless - AE* control panel.

Most functions are performed using the Master Code. Refer to "Master Code Functions" on page 37 for more information.

Before attempting to enter any of the Master Code functions, ensure that the system is in the disarmed state and that there are no alarm memory indicators flashing. If this is not the case, the following will be required.

- ❖ If any of the zone indicators are flashing fast, enter your followed by the button. This will reset any zone alarms that have occurred (If the system becomes armed, enter your followed by the button a second time to disarm the system).
- ❖ If the system has been armed in AWAY Mode or STAY Mode (ie. The AWAY or STAY indicator is illuminated), enter your followed by the button to disarm the system.

The factory default Master Code is **2580** and can be changed at any time. Therefore, if your system Master Code differs from the default, please substitute your existing Master Code in the following examples.

The Master Code allows you to change any user code and even the Master Code itself. The Master Code is the only code that allows the execution of Master Code functions detailed later in this manual.

Isolating Zones

When a zone has been isolated, access is allowed into that zone at all times. Isolating zones is performed by one of two methods. One way requires the use of a valid user code while the other way does not. The ability to isolate zones is governed by the priority level allocated to each user code holder. Some user code holders may not be able to isolate zones. Refer to "User Code Priority" on page 17 for further information.

Twenty four hour zone types and zones not used cannot be isolated. If isolation of these zones is attempted, a long beep will be heard.

Standard Isolating

1. Press the **STAY** button twice.
Three beeps will be heard.
2. * Enter the **ZONE NUMBER** required to be isolated followed by the **STAY** button. The zone you have just selected to be isolated will now begin to flash.

Repeat step 2 if more than one zone is required to be isolated.

3. Press the **AWAY** button when finished selecting the zones to be isolated.
Two beeps will be heard.

The zones selected to be isolated will now continue to flash until the system has next been disarmed. The system is ready to be armed in AWAY Mode.

STAY + **STAY** + **ZONE NUMBER** + **STAY**
 + **ZONE NUMBER** + **STAY** + **AWAY**



- * As each zone is isolated, the corresponding ZONE indicator will begin to flash. If a mistake is made, press the zone number that was incorrectly entered followed by the **STAY** button. This zone is now no longer isolated and the ZONE indicator will extinguish.


Code To Isolate

1. Press the **STAY** button.
2. Enter your **CODE**.
3. Press the **STAY** button.
Three beeps will be heard.
4. * Enter the **ZONE NUMBER** required to be isolated followed by the **STAY** button. The zone you have just selected to be isolated will now begin to flash.

Repeat step 4 if more than one zone is required to be isolated.

5. Press the **AWAY** button when finished selecting the zones to be isolated.
Two beeps will be heard.

The zones selected to be isolated will now continue to flash until the system has next been disarmed. The system is ready to be armed in AWAY Mode.

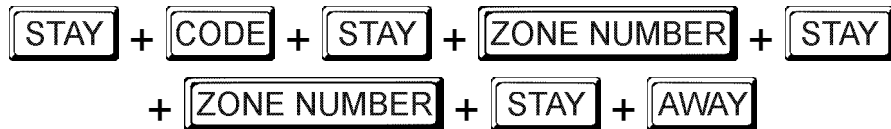

* As each zone is isolated, the corresponding ZONE indicator will begin to flash. If a mistake is made, press the zone number that was incorrectly entered followed by the **STAY** button. This zone is now no longer isolated and the ZONE indicator will extinguish.

Fault Analysis Mode

Whenever a system fault occurs, the FAULT or MAINS indicator will flash and the codepad will beep once every minute.

If the MAINS indicator is flashing, this is because the AC mains supply has been disconnected. There is no need to determine this type of system fault. Pressing the **AWAY** button once will acknowledge the AC mains fail and will stop the codepad beeping once every minute.

How To Determine The Type Of System Fault

To determine the type of system fault that has occurred, enter fault analysis mode by following the procedures below.

1. Hold down the **5** button until two beeps are heard or alternatively, enter your **MASTER CODE** followed by **5** and the **AWAY** button.

The FAULT indicator should remain steady and the STAY and AWAY indicators should flash in unison with each other.

The type of system fault will be indicated by the ZONE indicators. Refer to "Table 14: Fault Indicators" for the list of different system faults that may occur.

<i>Zone Indicator</i>	<i>Fault Description</i>
1	Low Battery
2	Date and Time
3	Sensor Watch
4	Horn Speaker Disconnected
5	Reserved
6	E ² Fault
7	Reserved
8	Communications Failure

Table 14: Fault Indicators

2. To exit fault analysis mode, press the **AWAY** button. The STAY and AWAY indicators will extinguish and the FAULT indicator will remain illuminated.

How To Acknowledge The System Fault

1. To acknowledge the system fault, press the **AWAY** button. The FAULT indicator will remain illuminated and the codepad will cease its once a minute beep.

Fault Descriptions

Low Battery

- 1 A low battery fault will register when the battery supply voltage falls below 10.5 volts or when a dynamic battery test detects a low capacity battery. This fault will clear after a successful dynamic battery test. A dynamic battery test is performed every four hours once power has been connected to the control panel and also every time the system is armed in AWAY Mode or STAY Mode.

Date and Time

- 2 The date and time fault will register every time the control panel has been powered down. This fault will not cause the FAULT indicator on the codepad to illuminate. This fault will only be indicated when holding down the **5** button for two seconds. This fault will clear once the date and time has been programmed. Refer to "Setting The Date and Time" on page 47 for further information.

Sensor Watch

- 3 A sensor watch fault will register because one of the detection devices has stopped working or has failed to detect movement for the programmed time period whilst the system is disarmed. The fault will clear after the registered zone has been unsealed and resealed again.

To find out which zone has registered the sensor watch fault, after fault analysis mode has been entered, hold down the **5** button a second time will display the zone that has registered the sensor watch fault.

Horn Speaker Monitor

- 4 A horn speaker fault will register when the horn speaker becomes disconnected from the control panel. This fault will clear when the horn speaker has been reconnected.

Reserved

- 5

E² Fault

- 6 An E² fault will register when the control panel detects an internal checksum error.

Zone Transmitter Low Battery

- 7 A zone transmitter low battery fault will register when any of the remote transmitters has registered a low battery. This will cause the FAULT indicator to flash and the offending transmitter will have it's ZONE indicator artificially kept on. Once the transmitters battery has been replaced and the zone has been triggered in either the armed or disarmed state, the FAULT indicator will extinguish.

Communication Failure

- 8 A communication failure fault will register if the control panel was unsuccessful in calling the receiving party after the control panel has exhausted its maximum number of attempts.

AC Mains Failure

An AC mains failure will flash the MAINS indicator, sound the codepad buzzer once every minute and send an "AC Fail" report to the monitoring station. This fault will clear once the AC mains has been reconnected. An "AC Restore" report will be transmitted once the AC mains has been restored for more than two minutes.

Codepad Duress Alarm

A codepad duress alarm can be used as a hold up alarm. This will occur when the number **9** is added to the end of any valid user code that is being used to disarm the system. A duress alarm is always silent and can only be made use of if your system is reporting back to a monitoring station or pocket pager.

CODE + **9** + **AWAY**

Codepad Panic Alarm

A codepad panic alarm will be triggered when either the **1** and **3** buttons or the **STAY** and **AWAY** buttons are pressed simultaneously. This is an audible alarm. Discuss this with your installer if you require the panic alarm to be silent.

1 + 3 or **STAY** + **AWAY**

Codepad Fire Alarm

A codepad fire alarm will be triggered when the **4** and **6** buttons on the remote codepad are pressed simultaneously. A distinct fire sound is emitted through the horn speaker to indicate this type of alarm condition. The fire sound is different to the burglary sound. This is an audible alarm. Discuss this with your installer if you require the panic alarm to be silent.

4 + 6

Codepad Medical Alarm

A codepad medical alarm will be triggered when the **7** and **9** buttons on the codepad are pressed simultaneously. This is an audible alarm. Discuss this with your installer if you require the panic alarm to be silent.

7 + 9

Remote Radio Transmitter Operation

The *Solution 6+6 Wireless - AE* control panel has the ability to be remotely operated using a hand held 2 channel radio transmitter. The radio transmitter has 2 buttons, each of which can perform various functions such as arming and disarming the system. These functions are described below in detail.

When using the hand held transmitter to operate the control panel, audible indications can be provided through the horn speakers. This will allow you to operate the system from outside the building with confidence. The feature of audible indications can only be programmed by your installer.

The following table will list the number of indication beeps that will be heard via the horn speaker.

<i>No Of Beeps</i>	<i>System Status</i>
1 Beep	System Has Been Disarmed
2 Beeps	System Has Been Armed In AWAY Mode
1 Two Tone Beep	System Has Been Armed In STAY Mode

Table 15: Horn Speaker Indication Beeps

Before any of these features will operate, you will need to teach the control panel the transmitters radio code. Refer to “Changing and Deleting Radio Remote User Codes” on page 40 for more information.

Arming Via Transmitter In AWAY Mode

1. Press button one on the transmitter for two seconds.
Two beeps will be heard on the remote codepad and the AWAY indicator will illuminate. Exit Time will now begin.

If horn speaker indication beeps have been enabled, two beeps will be heard from the horn speakers.

Disarming Via Transmitter From AWAY Mode

1. Press button one on the transmitter for two seconds.
Two beeps will be heard on the remote codepad and the AWAY indicator will now extinguish. If horn speaker indication beeps have been enabled, one beep will be heard from the horn speakers.



If you need to disarm the system via the transmitter, you will need to wait at least 6 seconds after arming the system. Failing to do so will cause the control panel to arm in STAY Mode.

Arming Via Transmitter In STAY Mode

1. Press button one on the transmitter for two seconds.
Two beeps will be heard on the remote codepad and the AWAY indicator will now illuminate. If horn speaker indication beeps have been enabled, two beeps will be heard from the horn speakers.
2. Press button one on the transmitter a second time for two seconds before 6 seconds has expired after arming the system in AWAY mode.

Four beeps will be heard on the remote codepad and the STAY indicator will now illuminate. If horn speaker indication beeps have been enabled, one two tone beep will be heard from the horn speakers.



If you fail to press button 1 within 6 seconds after arming the system, the system will then disarm and one long beep will be heard.

Disarming Via Transmitter From STAY Mode

1. Press button one on the transmitter for two seconds.
Two beeps will be heard on the remote codepad and the STAY indicator will now extinguish. If horn speaker indication beeps have been enabled, one beep will be heard from the horn speakers.

Panic Alarm Via Transmitter

1. Press button two on the transmitter for three seconds.
The panic alarm will now activate.

To disable the panic alarm via the transmitter and the remote codepad, contact your installer to disable these functions.

Turning An Output On Via Transmitter

1. Press button two on the transmitter for one second.
The programmed output will now turn on.



Pressing button two on the transmitter for more than one second may activate the panic alarm.

Turning An Output Off Via Transmitter

1. Press button two on the transmitter for one second.
The programmed output will now turn off.



Pressing button two on the transmitter for more than one second may activate the panic alarm.

Master Code Functions

Master Code functions are designed to allow those users that have the appropriate priority level to perform certain functions of a supervisory level. These functions can only be carried out while the system is in the disarmed state.



The default Master Code is **2580** and is known as **User 1**. It is possible for this system to have multiple Master Codes. Please check with your installer as to how your system is configured.

To enter the required Master Code Function, enter your **MASTER CODE** followed by the required **FUNCTION** digit and the **AWAY** button.

MASTER CODE + **FUNCTION** + **AWAY**

These functions can only be carried out when the system is in the disarmed state.

<i>Function</i>	<i>Description</i>
0	Arm Or Disarm Both Areas At The Same Time
1	Changing Or Deleting User Codes/Remote Radio User Codes
2	Changing Domestic Phone Numbers
3	Event Memory Recall
4	Walk Test Mode
5	Fault Analysis Mode
6	Setting The Date and Time
7	Turn Day Alarm On and Off
8	Reset Latching Outputs
9	Initiate Modem Call

Table 16: Master Code Functions

Arm Or Disarm Both Areas At The Same Time

0 This option allows you to arm or disarm both areas at the same time when the system has been partitioned. Both areas will arm or disarm to follow the state of the area that the code was entered from (ie: If you disarm an area, the other area will disarm, or if you arm an area, the other area will arm as well).

This allows a user to ensure that both areas will be armed by pressing one extra button rather than entering a user code at both area codepads. This function must be programmed by your installer.

How To Arm Or Disarm Both Areas At The Same Time

1. Enter your **MASTER CODE** followed by **0** and the **AWAY** button. Two beeps will be heard and both areas will arm or disarm.

MASTER CODE + **0** + **AWAY**

Changing and Deleting User Codes

- 1 This function allows a Master Code holder to add/change or delete any of the system user codes.

When changing or deleting user codes it is important that you know the number of the user you wish to change or delete. Your installer should provide you with this information at the time of installation.


How To Add Or Change A User Code

1. Enter your **MASTER CODE** followed by **1** and the **AWAY** button. Three beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Enter the **USER NUMBER** (1-8) that you wish to alter followed by the **AWAY** button.

Two beeps will be heard and the corresponding ZONE indicator will illuminate. Refer to "Table 17: Zone Indicators Showing Relative User Numbers" on page 39.

3. Enter the digits required for the **NEW CODE** followed by the **AWAY** button. Two beeps will be heard and the STAY and AWAY indicators will extinguish.

If you wish to change any further user codes, repeat this procedure as many times as required.

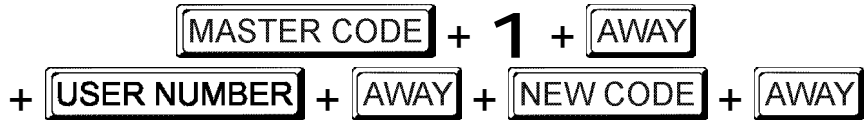

When adding or changing user codes, this function will automatically terminate if a button is not pressed within sixty seconds. Pressing the **AWAY button will also terminate the session at anytime. One long beep indicates the code entered already exists or an incorrect user number has been selected.**

How To Delete A User Code

1. Enter your **MASTER CODE** followed by **1** and the **AWAY** button.
Three beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Enter the **USER NUMBER** (1-8) that you wish to delete followed by the **AWAY** button.

Two beeps will be heard and the corresponding ZONE indicator will illuminate. Refer to "Table 17: Zone Indicators Showing Relative User Numbers" on page 39.

3. Press the **STAY** button to delete the user code.
Two beeps will be heard and the STAY and AWAY indicators will extinguish.

If you wish to delete any further user codes, repeat this procedure as many times as required.

MASTER CODE + **1** + AWAY
 + USER NUMBER + AWAY + STAY



When deleting user codes, this function will automatically terminate if a button is not pressed within sixty seconds. Pressing the **AWAY** button will also terminate the session at anytime. One long beep indicates an incorrect user number has been selected.

User No	Zone 1 Indicator	Zone 2 Indicator	Zone 3 Indicator	Zone 4 Indicator	Zone 5 Indicator	Zone 6 Indicator	Zone 7 Indicator	Zone 8 Indicator
1	✓							
2		✓						
3			✓					
4				✓				
5					✓			
6						✓		
7							✓	
8								✓

Table 17: Zone Indicators Showing Relative User Numbers

Changing and Deleting Radio Remote User Codes

- 1 This function allows a Master Code holder to add/change or delete any of the system radio remote user codes.

When changing or deleting radio remote user codes it is important that you know the number of the user you wish to change or delete. Your installer should provide you with this information at the time of installation.


How To Add Or Change A Remote Radio User Code

1. Enter your **MASTER CODE** followed by **1** and the **AWAY** button. Three beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Enter the **USER NUMBER** (9-16) that you wish to alter followed by the **AWAY** button.

Two beeps will be heard and the corresponding ZONE indicator will illuminate. Refer to "Table 17: Zone Indicators Showing Relative User Numbers" on page 39.

3. Now press the **TRANSMIT** button on the transmitter. Two beeps will be heard and the STAY and AWAY indicators will extinguish. The control panel has now been taught the code of the hand held radio transmitter.

If you wish to change any further radio remote user codes, repeat this procedure as many times as required.

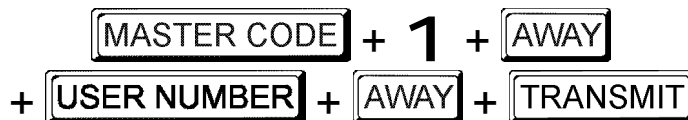

When adding or changing user codes, this function will automatically terminate if a button is not pressed within sixty seconds. Pressing the **AWAY button will also terminate the session at anytime. One long beep indicates the code entered already exists or an incorrect user number has been selected.**


How To Delete A Radio Remote User Code

1. Enter your **MASTER CODE** followed by **1** and the **AWAY** button. Three beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Enter the **USER NUMBER** (9-16) that you wish to delete followed by the **AWAY** button.

Two beeps will be heard and the corresponding ZONE indicator will illuminate. Refer to "Table 18: Zone Indicators Showing Relative Remote Radio User Numbers" on page 41.

3. Press the **STAY** button to delete the user code. Two beeps will be heard and the STAY and AWAY indicators will extinguish.

If you wish to delete any further user codes, repeat this procedure as many times as required.

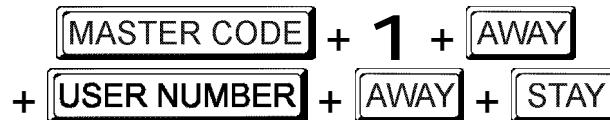

When deleting user codes, this function will automatically terminate if a button is not pressed within sixty seconds. Pressing the **AWAY** button will also terminate the session at anytime. One long beep indicates an incorrect user number has been selected.

User No	Zone 1 Indicator	Zone 2 Indicator	Zone 3 Indicator	Zone 4 Indicator	Zone 5 Indicator	Zone 6 Indicator	Zone 7 Indicator	Zone 8 Indicator	MAINS Indicator
9	✓							✓	
10									✓
11	✓								✓
12		✓							✓
13			✓						✓
14				✓					✓
15					✓				✓
16						✓			✓

Table 18: Zone Indicators Showing Relative Remote Radio User Numbers

Changing Domestic Phone Numbers

- 2 This option allows the Master Code holder to view and program the required telephone numbers that the system will call in the event of an alarm. For a more detailed description, refer to "Domestic Dialling Reporting" on page 59 for further information.

How To Change Domestic Phone Numbers




- 1. Enter your **MASTER CODE** followed by **2** and the **AWAY** button. Three beeps will be heard and the STAY and AWAY indicators will begin to flash.

If there are telephone numbers already programmed, they will be displayed one digit at a time via the zone indicators on the codepad. Refer to "Table 19: Zone Indicators For Changing Phone Numbers" on page 43 for the indicators and their meanings.

If there are no telephone numbers programmed, a further two beeps will be heard after entering this mode. These two beeps are normally heard after the last digit of the last phone number has been displayed.

- 2. Enter all the digits for **PHONE No. 1**, one digit at a time. You will notice as each digit is entered, the corresponding codepad indicators will illuminate.
- 3. After you have entered all the digits of the first telephone number press the **STAY** button if there is more than one phone number to be programmed. This will insert a break between the first telephone number and the second telephone number. If there is only one telephone number, press the **AWAY** button to exit this mode.
- 4. Enter all the digits for **PHONE No. 2**, one digit at a time. You will notice as each digit is entered, the corresponding codepad indicators will illuminate.
- 5. After the last digit of the second telephone number, press the **AWAY** button to exit this mode unless a third telephone number is required.

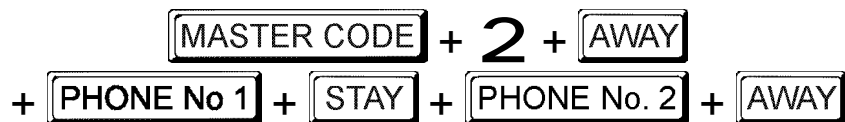

How To Disable Domestic Dialling

If at any time you wish to cancel domestic dialling for any reason (eg. You are moving house and you do not wish the system to continue calling your work place or mobile phone etc), you may enter the following sequence.

1. Enter your **MASTER CODE** followed by **2** and the **AWAY** button. Three beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Press the **STAY** button.
3. Press the **AWAY** button to disable domestic dialling.

MASTER CODE + **2** + **AWAY** + **STAY** + **AWAY**

Digit	Zone 1 Indicator	Zone 2 Indicator	Zone 3 Indicator	Zone 4 Indicator	Zone 5 Indicator	Zone 6 Indicator	Zone 7 Indicator	Zone 8 Indicator	MAINS Indicator
0									✓
1	✓								
2		✓							
3			✓						
4				✓					
5					✓				
6						✓			
7							✓		
8								✓	
9	✓							✓	
Number Separator				✓					✓

Table 19: Zone Indicators For Changing Phone Numbers

Event Memory Recall Mode

- 3 This feature allows you to playback the last forty events that have occurred to the system. The event memory recall mode reports all alarms and arming/disarming of the system in the AWAY Mode and STAY Mode. This function helps with trouble shooting system faults. The events are displayed via the codepad indicators.

How To Enter The Event Memory Recall Mode

1. Enter your **MASTER CODE** followed by **3** and the **AWAY** button. Three beeps will be heard. The events will be played back via the codepad indicators on the codepad in reverse chronological order.

MASTER CODE + **3** + **AWAY**

Example

If the events were as follows:

Event No	Event Description
1	System Armed In AWAY Mode
2	Alarm In Zone 3
3	Alarm In Zone 4
4	System Disarmed

Table 20: Event Memory Recall - Example Events

The event memory playback will report as follows:

Event No	Codepad Indicator	Event Description
4	All Indicators Off Except MAINS	System Disarmed
3	Zone 4 + AWAY Indicator Illuminates	Alarm In Zone 4
2	Zone 3 + AWAY Indicator Illuminates	Alarm In Zone 3
1	AWAY Indicator Illuminates	System Armed In AWAY Mode

Table 21: Event Memory Recall - Example Event Playback

Each event is indicated by a beep and an illuminated indicator. Resetting a 24 hour alarm in the disarmed state is indicated by one beep only. After the last event, three beeps will be heard to indicate the end of playback. The replay can be terminated at any time by pressing the **AWAY** button.



If the control panel has been powered down, the memory of all events will be lost.

Walk Test Mode

- 4 Walk test mode allows you to test detection devices to ensure that they are functioning correctly. This should be performed on a weekly basis.

Before activating walk test mode, isolate any zones that are not required for testing. Refer to "Isolating Zones" on page 29 for more information.

How To Enter Walk Test Mode

1. Enter your **MASTER CODE** followed by **4** and the **AWAY** button. Three beeps will be heard and the STAY and AWAY indicators will begin to flash. The codepad will beep once every second while the system is in the walk test mode.
2. Unseal and seal the zones to be tested. The codepad will sound one long beep and the horn speaker will sound one short beep every time a zone is sealed or unsealed.
3. Press the **AWAY** button to exit this function. Two beeps will be heard and the STAY and AWAY indicators will extinguish.

MASTER CODE + **4** + **AWAY**

Fault Analysis Mode

- Whenever a system fault occurs, the FAULT or MAINS indicator will flash and the codepad will beep once every minute.

If the MAINS indicator is flashing, this is because the AC mains supply has been disconnected. There is no need to determine this type of system fault. Pressing the **AWAY** button once will acknowledge the AC mains fail and will stop the codepad beeping once every minute.

How To Enter Fault Analysis Mode

- Enter your **MASTER CODE** followed by **5** and the **AWAY** button. Two beeps will be heard and the STAY and AWAY indicators will begin to flash in unison with the FAULT indicator.

One or more zone indicators (1-8) will illuminate indicating the type of fault that has occurred. Refer to “Fault Descriptions” on page 32 for further information.

- Press the **AWAY** button again to exit this function. Two beeps will be heard and the STAY and AWAY indicators will extinguish.

MASTER CODE + **5** + **AWAY**

<i>Zone Indicator</i>	<i>Fault Description</i>
1	Low Battery
2	Date and Time
3	Sensor Watch
4	Horn Speaker Disconnected
5	Reserved
6	E ² Fault
7	Zone Transmitter Low Battery
8	Communications Failure

Table 22: Fault Indicators

Setting The Date and Time

- 6 This function needs to be used when the date and time requires to be changed or the system has been powered down.

How To Set The New Date and Time



1. Enter your **MASTER CODE** followed by **6** and the **AWAY** button. Three beeps will be heard and the STAY and AWAY indicators will begin to flash.



2. Enter the day, month, year, hour and minute using the (DD, MM, YY, HH, MM) format.
3. Press the **AWAY** button to exit this function. Two beeps will be heard and the STAY and AWAY indicators will extinguish.

MASTER CODE + **6** + **AWAY**

Example

If the date and time needs to be set for the 1st January 1997 at 10:30 PM, program the date and time as follows;

MASTER CODE + **6** + **AWAY**
0 + 1 + 0 + 1 + 9 + 7 + 2 + 2 + 3 + 0
 + **AWAY**

Turning Day Alarm On and Off

- 7 This function will allow you to turn day alarm on and off. Day alarm can be used to monitor zones while the system is disarmed. Refer to page 14 for more information on day alarm.

How To Turn Day Alarm On

1. Enter your **MASTER CODE** followed by **7** and the **AWAY** button. Three beeps will be heard and day alarm will be turned on.

How To Turn Day Alarm Off

1. Enter your **MASTER CODE** followed by **7** and the **AWAY** button. Two beeps will be heard and day alarm will be turned off.

MASTER CODE + **7** + **AWAY**

Reset Latching Outputs

- 8 This function will reset any device that has been programmed to remain on once it has been activated. This could be a door bell that is required to keep ringing until someone has acknowledged it. Your installer will advise you if this feature has been set.

How To Reset Latching Outputs

1. Enter your **MASTER CODE** followed by **8** and the **AWAY** button. Two beeps will be heard and all latching outputs will reset.

MASTER CODE + **8** + **AWAY**

Initiate A Modem Call

- 9 This function will force the control panel to dial the callback telephone number programmed in an attempt to connect to your installers remote programming computer. Your installer may require you to do this for remote programming changes.

How To Initiate A Modem Call



1. Enter your **MASTER CODE** followed by **9** and the **AWAY** button. Two beeps will be heard.

MASTER CODE + **9** + **AWAY**

User Code Functions – Partitioned Systems Only

To enter the required user code function, enter your **USER CODE** followed by the required **FUNCTION** digit and the **AWAY** button.

USER CODE + **FUNCTION** + **AWAY**

Function	Description
0	Arm Or Disarm Both Areas At The Same Time

Table 23: User Code Functions

Arm Or Disarm Both Areas At The Same Time

- 0 This option allows you to arm or disarm both areas at the same time when the system has been partitioned. Both areas will arm or disarm to follow the state of the area that the code was entered from (ie: If you disarm an area, the other area will disarm, or if you arm an area, the other area will arm as well).

This allows a user to ensure that both areas will be armed by pressing one extra button rather than entering a user code at both area codepads. This function must be programmed by your installer.

How To Arm Or Disarm Both Areas

1. Enter your **USER CODE** followed by **0** and the **AWAY** button.
Two beeps will be heard and both areas will arm or disarm.

USER CODE + **0** + **AWAY**

Hold Down Functions

Hold down function have been incorporated to allow easy activation of specific operations. When a button is held down for two seconds, two beeps will be heard and a particular function will operate. The functions available are listed below.



The following hold down functions can only be carried out from the CP5 range of codepads. If the system has a CP6 codepad connected to the system, these hold down functions will not operate.

Arm The System In AWAY Mode

Holding the **#** button down until two beeps are heard will arm the system in the AWAY Mode.

If the system has been partitioned, holding down the **#** button on an area addressable codepad will only arm the area that the codepad belongs to in AWAY Mode. Holding down the **#** button on a Master Partitioned Codepad will not arm the area that is currently displayed and will toggle to the next available area.

Arm The System In STAY Mode

***** Holding the ***** button down until two beeps are heard will arm the system in STAY Mode. If there has not been an alarm during the armed cycle, holding the ***** button down a second time will disarm the system from STAY Mode.

If an alarm has occurred or entry warning has been triggered, a valid user code will need to be used to disarm the system.

If the system has been partitioned, holding down the ***** button until two beeps are heard will only arm the area that the codepad belongs to in STAY Mode.

Horn Speaker Test

1 Holding the **1** button down until two beeps are heard will sound the horn speaker for a two second burst. No other sounding device will sound in this mode.

If An EDMSAT – Satellite Siren has been connected to the control panel, this function will test the horn speaker for a two second burst followed by the strobe connected to the satellite siren.

Bell Test

2 Holding the **2** button down until two beeps are heard will sound the speakers for a two second burst. No other sounding device will sound in this mode.

If an EDMSAT – Satellite Siren has been connected to the control panel, this function will test the horn speaker for a two second burst followed by the strobe connected to the satellite siren.

Strobe Test

- 3** Holding the **3** button down will operate the strobe. No other device will operate in this mode.

If an EDMSAT – Satellite Siren has been connected to the control panel, this function will also test the strobe on the satellite siren.

How To Turn Strobe Test ON

1. Hold down the **3** button until three beeps are heard.
The strobe will begin to flash.

How To Turn Strobe Test OFF

1. Hold down the **3** button until two beeps are heard.
The strobe will stop flashing.

Turning Day Alarm On and Off

- 4** Holding the **4** button down will turn day alarm on or off.

How To Turn Day Alarm ON

1. Hold down the **4** button until three beeps are heard.
Day alarm has now been turned on.

How To Turn Day Alarm OFF

1. Hold down the **4** button until two beeps are heard.
Day alarm has now been turned off.

Fault Analysis Mode


5

There are various system faults that can be detected by the control panel. When any of these are present, the FAULT indicator will begin to flash and the codepad will beep once every minute. Refer to "Fault Descriptions" on page 32 for a more detailed description on each fault type.

How To Determine The Type Of Fault

1. Hold the **5** button down until two beeps are heard. The STAY and AWAY indicators will begin to flash in unison with the FAULT indicator. One or more ZONE indicators (1-8) will illuminate to indicate the type of fault that has occurred.

How To Exit Fault Analysis Mode

1. To exit fault analysis mode, press the  button. The STAY and AWAY indicators will extinguish.

Zone Indicator	Fault Description
1	Low Battery
2	Date and Time
3	Sensor Watch
4	Horn Speaker Disconnected
5	Reserved
6	E ² Fault
7	Zone Transmitter Low Battery
8	Communications Failure

Table 24: Fault Indicators

Initiate A Modem Call



6

Holding the **6** button down until two beeps are heard will force the control panel to dial the callback telephone number programmed in an attempt to connect to the installer's remote computer. Your installer may require you to do this for remote programming changes.

Reset Latching Outputs

7

Holding the **7** button down until two beeps are heard will reset any programmable output that has been programmed to remain on once it has been activated. This could be a door bell that is required to keep ringing until someone has acknowledged it. Your installer will advise you if this feature has been set.

Codepad ID and Beeper Tone Change

8

Holding down the **8** button for two seconds performs one of two functions.

The first function is to indicate the area that the codepad belongs to. The second function changes the tone of the codepad buzzer. There are fifty different tones to choose from between 1500 Hz and 5000 Hz and they are specific to each codepad. In a multiple codepad installation, each codepad can have a different tone.

How To Determine The Area That Codepad Belongs To

This function is only available if the system has been partitioned.

1. Hold the **8** button down until two beeps are heard before releasing the button.

A zone indicator will illuminate to indicate which area that the codepad belongs to.

<i>Zone Indicator</i>	<i>Codepad ID</i>
1	Area 1 Codepad
2	Area 2 Codepad
7	Master Partitioned Codepad

Table 25: Codepad ID Descriptions

If no zone indicator illuminates, the codepad cannot be used when the system has been partitioned.

2. Press the **AWAY** button to exit this function.

How To Change The Tone Of The Buzzer

1. To change the tone of the codepad buzzer, hold the **8** button down continuously. The tone of the buzzer will start to increase in pitch.

If the codepad is an addressable area codepad or a Master Partitioned codepad, two beeps will be heard indicating the area that the codepad belongs to as described above. Shortly after two beeps are heard, the tone of the codepad buzzer will begin to increase in pitch.

2. Release the **8** button when the desired tone has been reached.
3. Press the **AWAY** button to exit this function.

Initiate A Test Report

9

Holding the **9** button down until two beeps are heard will send a "Test" report which is used to test the dialling and reporting capabilities of the system without causing the sirens to sound. This hold down function is only applicable if your system has a communication dialler fitted and enabled.

Partitioning

The *Solution 6+6 Wireless - AE* control panel can be partitioned or split into two individual areas. Both areas can be operated from one Master Partitioned codepad or from a number of separate addressable codepads. In this case, one of each will be designated to a particular area.

Master Partitioned Codepad Indicators

The indicators on a Master Partitioned codepad are configured in to four groups. Following is a description of what the indicators show.

Zone Indicators

- 1 Zone indicators (1-8) display the status of each zone. These zones belong to the area that has the AREA DISPLAY indicator illuminated (ie. If a ZONE indicator is illuminated, that zone is unsealed and if the ZONE indicator is not illuminated, that zone is sealed).

Area On/Off Indicators

- 2 The group of four AREA ON/OFF DISPLAY indicators show the status of each area (ie. If an indicator is illuminated, that area is armed and if the indicator is not illuminated, that area is disarmed).

Area Display Indicators

- 3 A group of four AREA DISPLAY indicators show what area that the zones belong to that are currently being displayed.

Status Indicators

- 4 A group of four indicators show the following:

AUX Indicator

The AUX indicator displays when the system is using the telephone line and communicating to the receiving party.

The AUX indicator will flash in conjunction with the PARTIAL indicator to indicate successful entry into any programming mode. For example, this will occur when using Master Code functions.

Mains Indicator

This indicator displays the status of the AC mains supply (ie. If the MAINS indicator is illuminated, the AC mains is normal and if the indicator is flashing, the AC mains has been disconnected).

Fault Indicator

This indicator displays the status of the systems fault register (ie. If the FAULT indicator is flashing, the system has detected a fault that has not yet been acknowledged. If the indicator is illuminated, the fault has been acknowledged and if the indicator is not illuminated, the system has no system faults.

Partial Indicator

The partial indicator displays whether an area is armed in STAY Mode (ie. If the PARTIAL indicator is illuminated, an area is armed in STAY Mode and if the PARTIAL indicator is not illuminated, no areas are armed in STAY Mode.

Whilst isolating zones, the PARTIAL indicator flashes to indicate that you are in the isolate mode.

The PARTIAL indicator will flash in conjunction with the AUX indicator to indicate successful entry into any programming mode. For example, this will occur when using Master Code functions.

Operating Codepads When Partitioned

Operating From Area Addressable Codepads

If you have a partitioned system with Area Addressable codepads, the operating procedure is exactly the same as described throughout this manual. Refer to “Codepad ID and Beeper Tone Change” on page 53 to determine which area a particular codepad belongs to.

Operating From A Master Partitioned Codepad

If you have a partitioned system with a Master Partitioned codepad installed, the operating procedure is the same as described throughout this manual with one exception. All operations are relative to the area whose AREA DISPLAY indicator is illuminated at the time.

Example

If the AREA DISPLAY indicator number 2 is illuminated, all operations performed will effect only Area 2. To perform any operations in another area, you will have to move the AREA DISPLAY illuminator to the desired area.

How To Move From One Area To The Next

1. Press the **AWAY** button.
The area display indicator will move to the next area.
2. Press the **AWAY** button again.
The area display indicator will move to the next area.

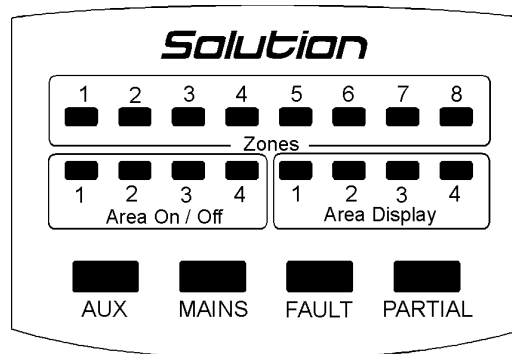


Figure 3: Master Partitioned Codepad

Communication Options

Your *Solution 6+6 Wireless - AE* control panel has a communications dialler fitted to report all alarms and system events. These events can be reported to a number of destinations via different transmission formats. These different formats have varying levels of ability. Some can report all events while others have limitations and may report alarms only. The suitability of the different formats should be discussed with your installer.

Options and Accessories

Domestic Tone Only Reporting

Back To Base Reporting Via Digital Communicator

Back To Base Reporting Via Securitel (Optional)

Basic Pager Reporting

Phone Controller

Remote Arming Via The Telephone

This feature allows you to arm your system from any remote location via the telephone line. For obvious security reasons, the system cannot be disarmed using this method. To make use of this feature, you will require a touch tone telephone or the phone controller.

How To Remotely Arm Your System Via The Telephone

1. Call the telephone number that your control panel has been connected to.
2. When the control panel answers the incoming call, a short jingle will be heard. Hold the phone controller to the mouth piece of the telephone and press the button on the side of the unit for 3 seconds. You can alternatively press the * button on the touch tone telephone for 3 seconds to arm the system.



If you hear a number of strange sounding tones when the control panel answers the incoming call, this means that the system has been programmed for remote programming functions. Simply wait for a pause in the tones and follow step 2 to remotely arm the system.

3. After releasing the button on the phone controller or the * button on the touch tone telephone, two beeps will be heard to indicate that the system has armed in AWAY Mode.
4. Hang up the telephone and the system will remain armed.

If the control panel does not answer the call, this means that the system may already be armed, remote functions have not been enabled or the ring count has been set to zero so that the control panel does not answer any incoming call.



Where both remote arming and Upload/Download via the installer's remote computer have been selected, the control panel will answer the call expecting the remote computer. This is easily noticed as the modem negotiating tones will be heard rather than the remote arming jingle.

Domestic Dialling Reporting

When the control panel has activated into alarm condition, it will commence dialling the first programmed telephone number. If a busy or engaged tone has been detected, the control panel will hang up and commence dialling the second telephone number (if one is programmed). The first call however will be counted as one unsuccessful dialling attempt. If the second telephone number is also busy or an engaged tone is detected, the control panel will hang up and commence dialling the third telephone number (if one is programmed).



If a busy tone is not detected, the control panel will assume that the phone has been answered and will begin sending its transmission. The transmission consists of a siren tone followed by a unit identification beep. The identification beep will allow the customer to verify which control panel made the call if more than one control panel is reporting to the same telephone number.

After the identification beep, a long pause will follow allowing you to acknowledge the call. If the call is not acknowledge during the pause, the sequence of the siren tone, the identification beep and the pause will continue until you acknowledge the call or until the control panel hangs up after two minutes has expired.



A maximum of 6 calls per alarm event will be made when the control panel has been set up for domestic dialling format. This count includes any unsuccessful calls. The counter will be reset if the zone retriggers and a further 6 attempts will be made. The control panel will stop dialling after 6 attempts or 3 successful calls. The control panel will also stop dialling if a valid user code has been entered at the remote codepad.

How To Acknowledge Domestic Dialling

Once the call has been received, if it is not acknowledged by pressing the * button on a touch tone telephone or by using the phone controller, the control panel will continue to send its transmission for a period of 2 minutes. It will then hang up and commence dialling the next telephone number. If the call is acknowledged, the control panel will hang up and no further calls will be made for that event.

Basic Pager Reporting

Basic pager reporting has been introduced so that alarms and system information can be transmitted to a pocket pager allowing you to receive information from your alarm system at any time.

Basic pager format requires some interpretation of the numbers that appear on the display, however, it is possible to differentiate between 1000 different control panels when a number of control panels are reporting to the one pager.

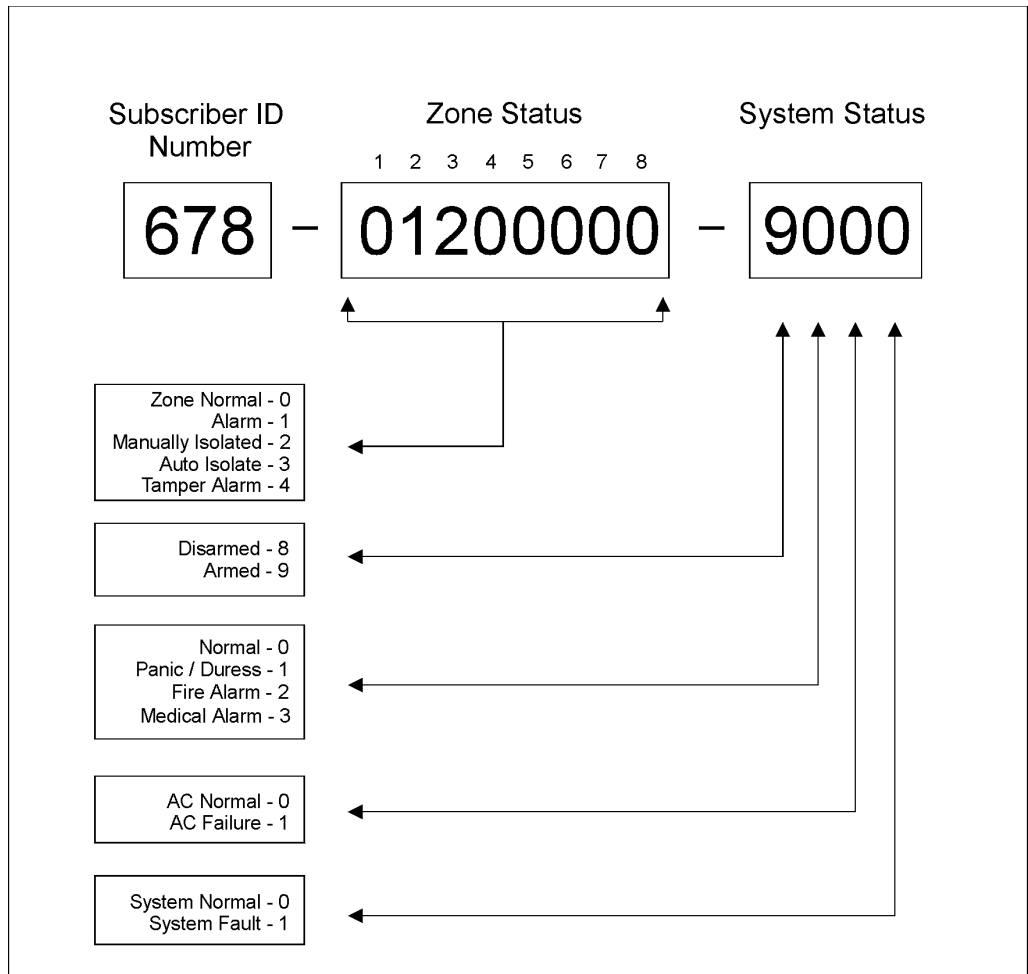


Figure 4: Basic Pager Display

The example shows that the transmission has come from Subscriber ID Number 678 and that zone 2 is in alarm, zone 3 has been manually isolated, the system is armed, the panic zone is normal, the AC is connected and there is no fault condition.

Optional Equipment

There are numerous accessories and features that can be added to your alarm system. Contact your installer for more information on any of the accessories listed below.

EDMSAT - Satellite Siren

To enhance the security of your system a satellite siren is available. When tampered with or disconnected from your system it will still continue to emit its ear shattering warning sound.

Additional Codepads

Numerous codepads can be fitted giving you the ability to control your system from not only the entry point but even from your bedroom or anywhere else that you may require.

Night Arm Station

The night arm station is a touch pad that allows you to perform three basic functions. Firstly, it allows you to arm your alarm system in STAY Mode by pressing just one button. Secondly, it allows you to activate a panic alarm 24 hours a day should an emergency situation arise. Thirdly, it provides system status at all times via its indicator lights. Using a night arm station means that at the press of a button you can arm your entire alarm system except for the zones that are designated for STAY Mode. The night arm station will allow the user to disarm the system from STAY Mode, providing that no alarm has been triggered.

Radio Remote Control

This equipment when fitted will enable you to control the general operation of your system from a portable hand held transmitter. It can even be used for basic arm/disarm where there is a requirement for a keyswitch.

Phone Controller

The phone controller can be used for remote arming of your system. Where this feature is required the phone controller can be used to generate a specific tone that will arm your system via the telephone. The phone controller can also be used to acknowledge domestic dialling.

Hand Held Radio Remote Control Panic Button

Any number of hand held panic buttons can be connected to your system. These are ideal for medical or emergency situations where help is required instantly. The benefits of these are only apparent if your system is monitored.

Smoke Detectors

Any number of smoke detectors may be connected to your system for an early warning of a fire. A different sound is available for your outside horn speaker if a smoke detector is triggered. This different sound will alert your neighbours to a fire rather than a burglary.

Photoelectric Beams

Photoelectric beams can be connected to your system to provide perimeter protection. These beams can be placed up to distances of 160 metres apart. Any movement across the beams (ie. a person or vehicle entering a driveway) will cause an alarm. These can be used in both indoor and outdoor applications.

Passive Infrared Detectors

Passive infrared (PIR) detectors are the most common type of detection devices used. PIR's detect human body heat up to a distance of approximately 15 metres at an angle of coverage of approximately 90 degrees.

Magnetic Reed Switches

Reed switches are used to monitor the opening and closing of doors and windows. These are ideal for perimeter protection when used in conjunction with STAY Mode.

Glass Break Detectors

Glass break detectors are used to pick up the sound of breaking glass. These are ideal for shop front windows.

Vibration Detectors

Vibration detectors are designed to pick up the vibrations of a rattling door or window.

Communications Dialler

A communications dialler is fitted to your system to inform another party that an alarm has occurred. Refer to "Communication Options" on page 57 for more information.

Telephone Line Fault Monitor

A telephone line fault monitor is designed to connect your alarm system to two telephone lines. When line A is disconnected the unit will automatically switch to line B. For added security, line B could be connected to a stand-alone cellular unit.

Glossary Of Terms

<i>Term</i>	<i>Description</i>
<i>Alarm Condition</i>	Is when your alarm system is armed and one of the detection devices are violated. A 24 hour zone (eg. Smoke detector) may trigger when your system is armed or disarmed.
<i>Answering Machine Bypass</i>	Answering machine bypass has been incorporated so that it is possible to make a connection with the control panel for remote arming or remote programming operations when there is an answering machine or facsimile machine on the same telephone line. Discuss this with your installer if you require answering machine bypass and how this will be used.
<i>Armed (System ON)</i>	When the system is in a state ready to accept alarms.
<i>AWAY or #</i>	This is the button on your codepad used to execute any given command.
<i>AWAY Mode</i>	Is the mode used to arm your system when you leave your premises.
<i>Codepad</i>	The codepad allows you to perform all functions such as arming, disarming and programming of your alarm system.
<i>Day Alarm</i>	Day alarm allows a combination of zones to be monitored while the system is in the disarmed state.
<i>Detectors</i>	Are devices connected to your alarm system used to cause an alarm condition. Some common forms of detection devices are; passive infrared, smoke, photo electric beams, reed switches and vibration sensors.
<i>Dialler</i>	Is a device that is used for communicating to a monitoring station, mobile phone or pocket pager etc.
<i>Disarmed</i>	Is when your system is in a state that will not accept alarms except for 24 hour zones.
<i>Dynamic Battery Testing</i>	Is a feature used to monitor and test the condition of your backup battery.
<i>EDMSAT (Satellite Siren)</i>	Is a self contained siren unit complete with flashing blue strobe light and a backup battery. It offers a higher level of security for your alarm system.
<i>Entry Time or Entry Delay</i>	Is the time allowed after entering your premises, to disarm your system before an alarm occurs.
<i>Entry Warning</i>	Is the beeping from your codepad during entry time to remind you to disarm your system.

<i>Term</i>	<i>Description</i>
<i>Exit Time or Exit Delay</i>	Is the amount of time you have to leave your premises after you have armed your system.
<i>External Equipment</i>	Is any device connected to your system such as detectors, codepads and sirens.
<i>Forced Arming</i>	Is a situation where your alarm system is permitted to be armed when one or more zones are unsealed.
<i>Handover Delay</i>	When your system is armed and zone one is violated, the entry delay starts timing. If zone two is then violated the entry delay time is handed over to zone two and so on through zones three and four. This is known as sequential hand over delay.
<i>Hand Held Radio Remote Control</i>	Can be used to arm and disarm your system or cause a panic alarm.
<i>Lockout Dialler</i>	Lockout dialler means that the dialler will only activate once per zone per arming cycle.
<i>Lockout Siren</i>	Lockout siren means that the sirens will only activate once per zone per arming cycle.
<i>Master Code</i>	Is a numerical code used for arming and disarming the system as well as allowing access to all functions that are programmable through the codepad.
<i>Monitoring Station</i>	Is a secure location where a digital receiver monitors numerous alarm systems and deciphers their alarm transmission reports so that the operator can advise the appropriate authorities to take immediate action.
<i>Panic</i>	This is a type of alarm raised by you to indicate to the monitoring station that there is an emergency situation at your premises.
<i>Phone Controller</i>	Is a device used for arming your system via the telephone line. It is also used to acknowledge domestic alarm reports.
<i>Sealed</i>	Refers to a zones status. If a zone is sealed, the detection devices are not violated and the zone indicator will be extinguished (ie. a reed switch is closed or a detector is on stand by waiting for an intrusion).
<i>Sensor Watch</i>	Sensor watch gives the control panel the ability to recognise that detection devices may have stopped working. This is a feature that monitors the operation of a zone over a programmed time period.
<i>Silent Alarm</i>	When programming your system, it is possible to have an individual zone for silent alarm. This means that when the zone is violated your alarm system will communicate with the monitoring station without sounding the sirens. This can only be programmed by your installer.

<i>Term</i>	<i>Description</i>
<i>STAY Mode</i>	Is a condition that automatically isolates certain zones when your system is armed in STAY Mode. These zones can only be programmed by your installer.
<i>Unsealed</i>	Refers to zone status. If a zone is unsealed, the detection devices are violated and the zone indicator will be illuminated (ie. a reed switch is open or a detector has noted an intrusion).
<i>User Code</i>	A numerical code used to arm and disarm the system.
<i>Zones</i>	A monitored input used to trigger an alarm condition.
<i>24 Hour Zone</i>	A monitored input where tamper switches and emergency switches may be connected. If at any time, (whether your system is armed or disarmed) one of these switches is violated, an alarm condition will be generated.

Warranty

Electronics Design and Manufacturing Pty limited warrants this product to be free from defects in material and workmanship for a period of three years from the date of manufacture as indicated by the date stamp and / or the serial number on the product.

Defective units returned by the purchaser at their own expense during this period will be repaired or replaced at the option of the manufacturer. The repair or replacement will be free of charge provided that the defects were not incurred during shipping or handling, or the damage was not due to causes beyond the control of Electronics Design and Manufacturing Pty Limited, excessive voltage, mechanical shock or damage arising out of abuse, alteration or improper application of the equipment.

Should a product be returned for repair and it is out of warranty, normal repair charges will be applicable. If the product is unrepairable or deemed uneconomical to repair in EDM's opinion, another replacement unit will be made available for purchase. In the event of a product being superseded, a similar or equivalent product may be offered for purchase.

Limitations

While this system is an advanced design security system, it does not offer guaranteed protection against burglary, fire or any other emergency. An alarm system, whether commercial or residential, is subject to compromise or failure.

Despite frequent testing, and due to, but not limited to, any or all of the following; criminal tampering, electrical or communications disruption, it is possible for the system to fail to perform as expected. Electronics Design and Manufacturing Pty Limited does not represent that the product or system may not be compromised or circumvented; or that the product or system will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; nor that the product or system will in all cases provide adequate warning or protection. A properly installed and maintained alarm system may only reduce risk of burglary, robbery, fire or otherwise but it is not insurance or a guarantee that these events will not occur.

CONSEQUENTLY, ELECTRONICS DESIGN AND MANUFACTURING PTY LIMITED SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE, OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING.

Electronics Design and Manufacturing Pty Limited is not an insurer of either the property or safety of the user's family or employees and limits its liability for any loss or damage including incidental or consequential damages to Electronics Design and Manufacturing Pty Limited's original selling price of the product regardless of the cause of such loss or damage.

Maintenance

Electronics Design and Manufacturing Pty Limited recommend the system be checked on a weekly basis for correct operation. Reference should also be made to Australian Standard 2201.1 in that routine maintenance should be carried out every six months by a licensed alarm technician.

Specifications

<i>Temperature Range:</i>	0 – 45 Degrees Celsius
<i>Humidity:</i>	10% - 95%
<i>Power Source:</i>	TF008 Plug Pack – 240 Volt / 18 Volt AC @ 1.3 Amp
<i>Stand-By Current:</i>	65 mA
<i>Current Draw In Alarm Condition:</i>	115 mA
<i>Current Draw With No Alarm and Codepad Fitted:</i>	105 mA
<i>Back-Up Battery:</i>	6.5 Ah / 12 Volt DC Rechargeable Sealed Lead Acid Battery
<i>Dimensions:</i>	306 mm x 262 mm x 84 mm (Packed In Carton)
<i>Weight:</i>	2.5 Kg
<i>Austel Approval Number:</i>	A96/03/0096 – Only With TF008 Plug Pack
<i>New Zealand Telepermit:</i>	PTC 211/96/007

Advice To Users

The Austel permit that has been issued for this product is subject to the following conditions.

- The *Solution 6+6 Wireless - AE* control panel may only be powered by an EDM Plug Pack TF008 (Approval number Q92128).

New Zealand Telepermit Notes

The following notes are only relevant when this product is used in New Zealand.

- The grant of a Telepermit for a device in no way indicates Telecom's acceptance of responsibility for the correct operation of that device under all operating conditions.
- The equipment shall not be used in any manner, which could constitute a nuisance to other Telecom customers.
- Immediately disconnect this equipment should it become physically damaged, and arrange for its disposal or repair.
- The transmit level from this device is set at a fixed level and because of this there may be circumstances where the performance is less than optimal. Before reporting such occurrences as faults, please check the line using a standard Telepermitted telephone and do not report a fault unless the telephone performance is impaired.

Quality Policy

AS 3901 Clause 4.1.1 Refer to Procedure No 1

The operations of Electronics Design and Manufacturing Pty Limited include design, development and manufacturing of electronic equipment.

Electronics Design and Manufacturing Pty Limited recognises that it is the responsibility of suppliers and contractors to meet their contractual obligations and carry out works which comply fully with the relevant specifications, drawings and contract documents.

It further recognises that the diligent operation of a Quality Management System leads to efficient and effective execution of the works with a minimum of errors and rework.

Electronics Design and Manufacturing Pty Limited and its Employees are committed to the implementation of this Quality Management System in accordance with Australian standard AS3901-1987, European standard ISO9001-1987 and New Zealand standard NZS9001-1990 implementing quality systems for design, development and production to the mutual benefit of the customers and Electronics Design and Manufacturing Pty Limited.

Meinrad Formosa
Managing Director

Installation Notes

Installation Company

Technician

Phone Number

Installation Date

Warranty Expires

Zone Descriptions

		STAY Mode	Day Alarm
Zone 1	<hr/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone 2	<hr/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone 3	<hr/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone 4	<hr/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone 5	<hr/>	<input type="checkbox"/>	
Zone 6	<hr/>	<input type="checkbox"/>	
Tamper 1	<hr/>		
Tamper 2	<hr/>		
Tamper 3	<hr/>		
Tamper 4	<hr/>		
Tamper 5	<hr/>		
Tamper 6	<hr/>		

Entry and Exit Times

Entry Timer 1 _____ Seconds

Entry Timer 2 _____ Seconds

Exit Time _____ Seconds

Entry Guard Time For STAY Mode _____ Seconds

User Code Options

Code Retry Count _____ Attempts

Codepad Lockout Time _____ Minutes

Arming Options

Forced Arming YES NO

Single Button Arming YES NO

Single Button Disarming YES NO

Remote Arming Via The Telephone YES NO

Output Options

Output 1 _____

Output 2 _____

Output 3 _____

Isolating Options

Standard Isolating

Code To Isolate

Communication Options

Domestic Tone Reporting

Domestic Tone Reporting – Number Of Beeps

Others

Siren Run Time

Minutes

Sensor Watch Time

Days

Can Your System Be Serviced By Another Technician

If YES, Installer's Code

Index

2

24 Hour Zone..... 65

A

AC Mains Failure..... 33
 Acknowledge Domestic Dialling 59
 Adding Radio Remote User Codes 40
 Adding User Codes 38
 Advice To Users 69
 Alarm Condition 63
 Alarm Memory 13
 Answering Machine Bypass 63
 Area Display Indicators..... 54
 Area On/Off Indicators..... 54
 Arm In AWAY Mode 24, 50
 Arm In STAY Mode 25, 50
 Arm/Disarm Both Areas At Same Time..... 37, 49
 Armed 63
 Arming Via Telephone..... 58
 Arming Via Transmitter In AWAY Mode..... 35
 Arming Via Transmitter In STAY Mode 36
 Audible Indicators..... 20, 23
 AUX Indicator 54
 AWAY Indicator 19, 21
 AWAY Mode 63
 AWAY or #..... 63

B

Basic Pager Reporting..... 60
 Basic System Operation 11
 Battery Testing 63
 Bell Test 50

C

Changing Domestic Phone Numbers 42
 Changing Radio Remote User Codes 40
 Changing User Codes..... 38
 Code Retries 12
 Code To Isolate..... 30
 Codepad 63
 Codepad Beeper Tone Change 53
 Codepad Duress 34
 Codepad Extinguish Mode 12
 Codepad Fire 34
 Codepad Functions 28
 Codepad Lockout Time 12
 Codepad Medical 34
 Codepad Panic 34
 Codepads 61
 Communication Dialler 62
 Communication Failure..... 33
 Communication Options 57
 CP5 Codepad 19
 CP5 LCD Codepad 21

D

Date and Time..... 15, 32, 47
 Day Alarm 14, 47, 51, 63
 Day Alarm Latching..... 14
 Day Alarm Operation 14
 Day Alarm Resetting..... 14
 Deleting Radio Remote User Codes 41
 Deleting User Codes..... 39
 Detectors..... 63
 Dialler 62, 63
 Disable Domestic Dialling..... 43
 Disarm From AWAY Mode 25
 Disarm From STAY Mode 27
 Disarmed 63
 Disarming Via Transmitter From AWAY Mode 35
 Disarming Via Transmitter From STAY Mode 36
 Domestic Dialling - Acknowledge 59
 Domestic Dialling Reporting 59
 Domestic Phone Numbers 42
 Duress Alarm..... 34

E

E2 Fault 32
 EDMSAT 63
 EDMSAT - Satellite Siren 61
 Entry Time..... 15, 63
 Entry Warning 63
 Event Memory Recall..... 44
 Exit Time 15, 64
 External Equipment..... 64

F

FAULT - AC Mains Failure 33
 FAULT - Communication Failure..... 33
 FAULT - Date and Time 32
 FAULT - E2 Fault..... 32
 FAULT - Horn Speaker..... 32
 FAULT - Low Battery..... 32
 FAULT - Sensor Watch..... 32
 FAULT - Zone Transmitter Low Battery 33
 Fault Analysis Mode 31, 46, 52
 FAULT Indicator 20, 22, 54
 Features 10
 Fire Alarm 34
 Forced Arming..... 24, 26, 64

G

Glass Break Detectors 62
 Glossary Of Terms 63

H

Hand Held Radio Remote Control 64
 Hand Held Radio Remote Control Panic 61
 Handover Delay 64
 Hold Down Function - Arm In AWAY Mode 50
 Hold Down Function - Arm In STAY Mode 50

Hold Down Function - Bell Test	50	Operating From Area Addressable Codepads	56
Hold Down Function - Codepad ID & Beeper Tone Change	53	Optional Equipment.....	61
Hold Down Function - Fault Analysis Mode	52	P	
Hold Down Function - Horn Speaker Test	50	Panic	64
Hold Down Function - Initiate Modem Call	52	Panic Alarm	34
Hold Down Function - Initiate Test Report	53	Panic Alarm Via Transmitter	36
Hold Down Function - Reset Latching Outputs	52	PARTIAL Indicator.....	55
Hold Down Function - Strobe Test.....	51	Partitioning	54
Hold Down Function - Turn Day Alarm On/Off.....	51	Passive Infrared Detectors	62
Hold Down Functions.....	50	Phone Controller	61, 64
Horn Speaker	32	Photoelectric Beams	62
Horn Speaker Test.....	50	Programming Mode.....	22
I		Q	
Initiate Modem Call	48, 52	Quality Policy.....	70
Initiate Test Report.....	53	R	
Installation Notes	71	Radio Remote Control	61
Introduction	9	Remote Arming Via Telephone.....	58
Isolating Zones.....	29	Remote Arming Via Transmitter In AWAY Mode	35
L		Remote Arming Via Transmitter In STAY Mode	36
Latching Outputs.....	52	Remote Disarming Via Transmitter From AWAY Mode	35
Lockout Dialler	64	Remote Disarming Via Transmitter From STAY Mode	36
Lockout Siren.....	64	Remote Panic Alarm Via Transmitter.....	36
Low Battery	32	Remote Radio Transmitter Operations	35
M		Reset Latching Outputs.....	48, 52
Magnetic Reed Switches.....	62	S	
MAINS Indicator	20, 22, 54	Satellite Siren	61, 63
Master Code.....	64	Sealed	64
Master Code Function - Arm/Disarm Both Areas At Same Time	37	Sensor Watch	32, 64
Master Code Function - Changing & Deleting Codes ..	38	Sensor Watch Time	13
Master Code Function - Changing & Deleting Radio Remote User Codes	40	Service Notes	74, 75
Master Code Function - Changing Domestic Phone Numbers.....	42	Silent Alarm.....	64
Master Code Function - Event Memory Recall.....	44	Smoke Detectors	61
Master Code Function - Fault Analysis Mode.....	46	Specifications	68
Master Code Function - Initiate Modem Call	48	Standard Isolating.....	29
Master Code Function - Reset Latching Outputs.....	48	Status Indicators	54
Master Code Function - Set Date and Time	47	STAY Indicator.....	19, 21
Master Code Function - Turn Day Alarm On/Off	47	STAY Mode.....	65
Master Code Function - Walk Test Mode.....	45	Strobe Test	51
Master Code Functions.....	37	System Disarmed.....	22
Master Partitioned Codepad Indicators.....	54	System Indicators & Operations.....	19
Medical Alarm	34	System Operation	11
Modem Call	52	System Operations.....	24
Monitoring Station	64	T	
N		Teaching Remote Radio User Codes	16
New Zealand Telepermit Notes.....	69	Telephone Line Fault Monitor	62
Night Arm Station.....	61	Test Report.....	53
O		Turn Day Alarm On/Off	47, 51
OFF Indicator/Zone Sealed.....	23	Turning The Output Off Via Transmitter.....	36
ON Indicator/Zone In Alarm.....	23	Turning The Output On Via Transmitter	36
Operating Codepads When Partitioned.....	56	U	
Operating From A Master Partitioned Codepad.....	56	Unsealed	65
		User Code	65

User Code Function - Arm/Disarm Both Areas At Same Time	49	W	
User Code Priority	17	Walk Test Mode.....	45
User Codes	16	Warranty	66
User Codes 1 - 8	16	Z	
User Codes 9 - 16	16	Zone Indicators	19, 21, 54
V		Zone Isolating Mode Indicator.....	22
Vibration Detectors.....	62	Zone Transmitter Low Battery.....	33
		Zones.....	65



Electronics Design & Manufacturing Pty Limited

25 Huntingwood Drive
Huntingwood NSW 2148
Australia

A.C.N. 002 907 271

Phone: +612 9672 1777
Facsimile: +612 9672 1717
email: edm@edm.com.au
