



**D24 ALARM CONTROL PANEL**

# **USER'S MANUAL**

REVISION 1.1



A\$12.00 INC GST



Ness Security Products Pty Ltd



**WWW.NESS.COM.AU**

*“Australia’s largest  
designer and  
manufacturer of  
high quality security  
products”*

**HEAD OFFICE:**

Ness Security Products Pty Ltd  
ACN 069 984 372  
4 / 167 Prospect Hwy  
Seven Hills NSW 2147 Australia  
Ph +61 2 8825 9222  
Fax +61 2 9674 2520  
ness@ness.com.au

SYDNEY  
02 8825 9222

MELBOURNE  
03 9878 1022

BRISBANE  
07 3343 7744

ADELAIDE (Aquavia Controls)  
08 8277 7255

PERTH  
08 0328 2511

NEW ZEALAND (NFS NZ)  
+64 9 573 0401



REVISION 1.1, AUGUST 2001

D24 USER MANUAL  
Document Part Number: 890-XXX  
For product: 100-660 D24 Control Panel

© 2001 Ness Security Products Pty Ltd ACN 069 984 372  
D24user pmo020801


Specifications may change without notice.

|                                    |       |
|------------------------------------|-------|
| Features .....                     | 4     |
| Keypad .....                       | 5     |
| Keypad Display Table .....         | 6     |
| View Menu Operation .....          | 7     |
| <br>                               |       |
| OPERATION .....                    | 8     |
| Arming .....                       | 9     |
| Disarming .....                    | 9     |
| AREA Operation .....               | 10    |
| Arming & Disarming Areas .....     | 11    |
| Administrator Code .....           | 12    |
| Monitor Mode .....                 | 13    |
| Panic Alarm .....                  | 14    |
| Duress Alarm .....                 | 14    |
| Medical Alarm .....                | 15    |
| Fire Alarm .....                   | 15    |
| VIEW Alarms .....                  | 16    |
| VIEW Memory .....                  | 17    |
| Excluding Zones .....              | 19    |
| Automatic Zone Test .....          | 20    |
| Siren Test .....                   | 21    |
| <br>                               |       |
| PROGRAMMING                        |       |
| Programming Options Table .....    | 21    |
| How to Program .....               | 22    |
| User Code programming .....        | 22-23 |
| Entry/Exit Timer programming ..... | 24    |
| Wireless Accessories .....         | 25    |
| Installation Record .....          | 26    |
| Operation Summary .....            | 27    |

## NESS D24 FEATURES





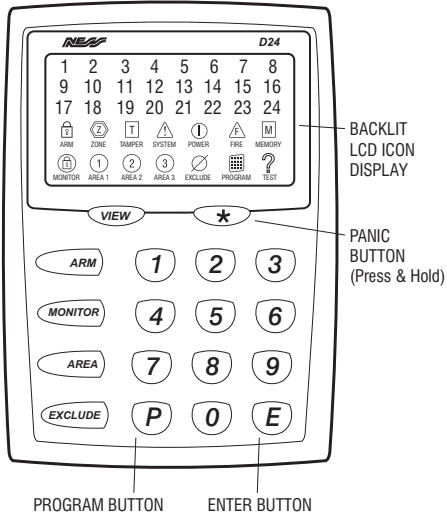









---


- Powerful multizone commercial security
- 24 fully programmable zones
- Up to 8 Radio Zones
- Contact ID Dialler Format
- Ness Audible Dialler Format
- "Follow Me" Audible Dialler Option
- Separate 24 Hour Tamper input
- Single or Double Trigger Zones
- Remote LCD Keypads (Max 3)
- Fully programmable via the system Keypad - Eliminates the need for expensive programmers or Proms.
- Inbuilt Vibration Sensor Analyser
- All programming data is permanently stored in a non-volatile EEPROM memory
- True Dynamic Battery Test every time the Panel is Armed / Disarmed and every hour
- Area Partitionable (3 Areas). Any Zone can be programmed to any area, as well as common areas
- Comes complete with an AC plug pack and supports a 12V 7Ah battery to maintain system security under all power supply conditions
- Two separate Monitor Modes (Home Mode)
- Outputs are separately fused with Automatic Reset Fuses
- Day Mode and Door Chime feature.
- 30 Event Memory
- Supports 8 Radio Devices (Radio PIRs, Radio Reeds etc)
- Supports 8 Radio Keys
- All inputs and outputs are heavily protected against lightning and high voltage supply transients. An earth terminal is provided for extra protection
- 30 User Codes
- Programmable Inputs to activate selectable Outputs (Output Mapping)
- Manufactured with the latest SMD Technology
- Ultra-Modern and Impact resistant Housing
- Forced Arming Feature



**KEYPAD DISPLAY TEST:**  
Press and hold **(E)** button.


# KEYPAD DISPLAY TABLE

|  | OFF               | ON                                  | Flashing FAST                                  | Flashing SLOW                |
|--|-------------------|-------------------------------------|--|------------------------------|
| <b>1-24 ZONES</b>  | Zone sealed       | Zone unsealed                       | Zone Alarms present (in Armed or Monitor Mode) |                              |
|  <b>ARM</b>       | Panel is Disarmed | Panel is Armed                      |  |                              |
|  <b>ZONE</b>      |                   | Displaying Zone Status              |  |                              |
|  <b>TAMPER</b>    | Normal            | Displaying individual Tamper Alarms | Tamper Alarms present                          |                              |
|  <b>SYSTEM</b>    | Normal            | Displaying individual System Alarms | System Alarms present                          |                              |
|  <b>POWER</b>     | Normal            | Displaying individual Power Alarms  | Power Alarms present                           |                              |
|  <b>FIRE</b>      | Normal            | Fire warning (If enabled)           | Fire alarm (If enabled)                        |                              |
|  <b>MEMORY</b>    | Normal            | Memory Mode or View key pressed     | New alarm in Memory                            |                              |
|  <b>MONITOR</b>   |                   |                                     |  | Panel is in Monitor Mode     |
|  <b>AREA 1</b>   |                   | Area 1 Armed                        |  | Area 1 Monitor               |
|  <b>AREA 2</b>  |                   | Area 2 Armed                        |  | Area 2 Monitor               |
|  <b>AREA 3</b>  |                   | Area 3 Armed                        |  |                              |
|  <b>EXCLUDE</b> |                   | Exclude Mode                        |  | Zone or other alarm Excluded |
|  <b>PROGRAM</b> | Normal            | User Program Mode                   |  |                              |
|  <b>TEST</b>    | Normal            | Siren Test                          |  |                              |

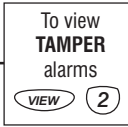


## TAMPER ALARMS

- 1 External Tamper
- 2 Control Panel Tamper
- 3 Zone input Tamper
- 5 Radio Interface Tamper

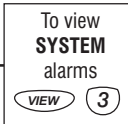


## SYSTEM ALARMS

 - 1 Keyswitch Panic
- 2 Dialler line fault
- 3 Keypad connection fault
- 4 Control Panel fault
- 5 Duress emergency alarm
- 6 Panic emergency alarm
- 7 Medical emergency alarm
- 8 User Code alarm

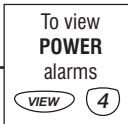


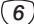


## POWER ALARMS


- 1 Mains power failure
- 2 Backup Battery low
- 3 DC supply failed
- 4 Zone reference supply failed
- 9 Radio Device battery low
- 0 Radio Key battery low



## MEMORY DISPLAY

MEMORY icon flashes to indicate that Memory contains new events. Memory can be viewed at any time.

1. Press  
2.  Memory icon turns on  
*Keypad icons will display the most recent event as per the Keypad Display Table*
3. Step through the Memory display by pressing the  button. At each step, the keypad icons display the history of Arming, Disarming and alarm events.

*Memory display ends when all events have been viewed or Press  to cancel the Memory display at any time*

# OPERATION

---

## ARMING AND DISARMING

The Ness D24 micro computer based 24 zone **control panel** is the heart of your security system to which all your detection devices connect.

Each **Zone** of the panel can be connected to one or more detection devices to protect separate rooms of your premises.

Detection devices may be connected to the D24 control system directly by cabling or with **optional wireless** (Radio) devices.

The most common type of detection devices are **Passive Infra-Red Motion Detectors** (or **P.I.R's** for short) and Reed Switches for doors and windows.

## OPERATING MODES

The Ness D24 will operate in one of the following modes:

**ARMED:** The system is “On” and ready to detect intrusion. 24 Hour Zones (if configured) are still active. Area Partitioning means the panel can be split into three separate “Areas” which can be Armed and Disarmed independently of each other.

**DISARMED:** The system is “Off”. This is the normal mode when the premises are occupied. Day Zones and 24 Hour Zones (if configured) are still active.

**DAY Mode:** The system is *Disarmed* and a zone or zones have been setup to create an alarm when activated. Often used as a doorway alert in a shop.

**MONITOR Mode:** Allows the system to be “partially” Armed. For example, in a house, to allow all perimeter zones, doors and windows, to be Monitored (armed) at night.

**24HR Zones:** Zones that have been setup to be active in any mode. Usually used for Tamper switches and Panic buttons.





## ARMING THE SYSTEM


If the D24 has not been programmed for Area operation, this method will Arm the entire system.

Press...  (If Two Button Keypad Operation is disabled. This is the factory default.)

...or   (If Two Button Keypad Operation is enabled.)

...or  [CODE]  (If Shortcut Arming is disabled.)

Three beeps will sound  and the ARM icon will turn ON 

Leave the premises within the Exit Delay Time. At the end of Exit Delay Time, 1 beep will sound 

The control panel must be Armed prior to vacating the premises in order to detect intruders. Ensure that the panel is not in Program, Memory or Exclude modes.

Note: If the panel is already in alarm, you must first silence the alarm before you can Arm.

### SIREN WARNING:

At the end of the exit time, all zones should be **Sealed**. If any are **Unsealed**, the siren will sound for 2 seconds as a warning to indicate that those

zones have been automatically excluded. For maximum security, you should return, Disarm, check the premises and then Arm again. Continual warnings could mean that a detector is faulty and may have to be manually excluded.



### AUTO EXCLUDE:

If the auto-exclude option is disabled, the siren will sound for the duration of reset time if a zone is Unsealed at the end of exit time.

## DISARMING THE SYSTEM

If the D24 has not been programmed for Area operation, this method will Disarm the entire system.

Press... [CODE] 

Three beeps will sound  and the ARM icon will turn OFF 

Disarm the panel during the Entry Delay Time to prevent unwanted "Alarm on entry". An error beep when attempting to Disarm may indicate:

- Incorrect Code
- or the panel is already Disarmed
- or the panel is in Exclude mode

See Page 12 for Disarming Areas

# AREA OPERATION

## AREA OPERATION, DEFINITION

Area Operation allows the 24 zones to be split into three Areas. The panel then effectively operates as three separate systems sharing only the siren outputs and dialler. The three Areas can either share one keypad or operate from multiple keypads.

## USER CODES - OPERATION

Areas can be operated by users holding Area Codes or Administrator Codes.

AREA CODES are User Codes which are programmed to operate one Area only.

ADMINISTRATOR CODES are User Codes which can operate any Area.

## COMMON AREA - OPERATION


The Common Area refers to a zone or zones that have been assigned to more than one Area. The Common Area is used in cases where the requirement is for a zone/s to automatically Arm or Disarm depending on the state of the overlapping Areas.

### The Common Area behaves as follows:

When *all* Areas are Armed, the Common Area automatically Arms

When *any* Area has Disarmed, the Common Area automatically Disarms

### EXAMPLE: COMMON AREA OPERATION

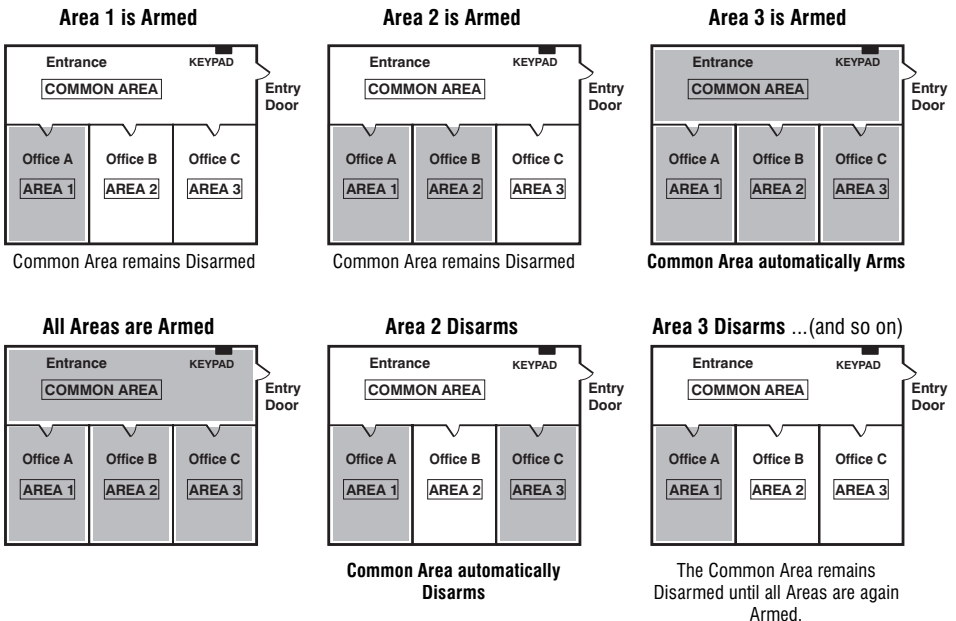


## TO ARM YOUR AREA

Most users of the panel should be assigned Area Codes. An Area Code allows you to Arm and Disarm only the Area which has been assigned to that code. This makes Area operation as simple as possible with the least number of keystrokes.

Press...  [CODE] 

Three beeps will sound  and your AREA icon will turn ON  or  or 

Leave the Area within the Exit Delay Time. At the end of Exit Delay Time, 1 beep will sound 







**SHORTCUT ARMING IS *NOT* ALLOWED FOR AREA CODE ARMING.**

## TO DISARM YOUR AREA

To Disarm the Area assigned to your code, simply enter your code followed by E.

Press... [CODE] 

Three beeps will sound  and the respective AREA icon will turn OFF  or  or 

# ADMINISTRATOR CODES

## TO ARM AREAS USING AN ADMINISTRATOR CODE


Using an Administrator Code to Arm selected Areas.

Press... **AREA** 1, 2 or 3 **E** **ARM** [CODE] **E** \*

...or to Arm multiple Areas at once

**AREA** 1 **E** and/or 2 **E** and/or 3 **E** **ARM** [CODE] **E**

Three beeps will sound  and the selected AREA icon/s will turn ON  or  or 

Leave the Area within the Exit Delay Time. At the end of Exit Delay Time, 1 beep will sound 



**SHORTCUT ARMING IS ALLOWED FOR ADMINISTRATOR CODE ARMING.**

**When Shortcut Arming is enabled:**

Two Button Keypad Operation is enabled: [CODE] is not needed.

Two Button Keypad Operation is disabled: [CODE] + E is not needed.

## TO DISARM AREAS USING AN ADMINISTRATOR CODE

Using an Administrator Code to Disarm selected Areas.

Press... **AREA** 1, 2 or 3 **E** [CODE] **E**

...or to Disarm multiple Areas at once

**AREA** 1 **E** and/or 2 **E** and/or 3 **E** [CODE] **E**

Three beeps will sound  and the selected AREA icon/s will turn OFF  or  or 

...or a shortcut to Disarm all Areas

Press... [CODE] **E**

Three beeps will sound  and all AREA icons will turn OFF  or  or 

## ARMING MONITOR MODE

Monitor mode allows you to Arm selected zones while others are ignored. Typically used to monitor perimeter zones (doors and windows) while you are at home.

Your system may be programmed to give the choice of Arming two different Monitor areas (Dual Monitor mode), otherwise there is one Monitor area (Single Monitor mode).

### ALARM TYPES IN MONITOR MODE

Monitor mode alarms can be programmed to

trigger a number of different combinations of siren, strobe, dialler and other alarms.

The most common configuration (which is also the factory default) triggers the keypad sonalert (beeper) as well as a siren burst.

### ZONES MUST BE SEALED

Make sure that all zones in the Monitor area are sealed before Arming Monitor mode.

### EXIT DELAY

The Exit Delay time applies to Monitor mode.

### ARMING SINGLE MONITOR MODE

Press... 

...or  

...or  [CODE] 

### ARMING DUAL MONITOR MODE

Press...   ...or  

...or   

...or   

# EMERGENCY ALARMS

---


## PANIC ALARM


The keypad panic function may have been programmed to be either:

**Audible:** Activates siren or buzzers  
or **Silent:** If your system is monitored by a Central Station, sends a Panic report by dialler. (If Panic reports have been enabled by your installer).

Panic cannot be used while the panel is in Program, Memory or Exclude mode.

Note: Your installer may have installed a separate panic button. To activate the panic alarm simply press that button.

Keypad Panic alarm is number **6** in the  view.

Press...  (Press and hold for at least 1 second)


...or   (If Two Button Keypad Operation is enabled)

## DURESS ALARM

A DURESS alarm can be triggered to alert the Central Monitoring Station that you are being forced to Disarm the panel against your will.

By default, DURESS alarms do not sound any audible alarms unless programmed to do so by your installer.

To Disarm and simultaneously send a DURESS alarm, prefix your User Code with the “Duress Digit” when Disarming.

Duress alarm is number **5** in the  view.

The factory default Duress Digit is 9. (It can be any number from 0~9).

Disarm by pressing... **[Duress Digit] [CODE]** 

The panel Disarms as normal and the Duress report is sent to the Central Monitoring Station.



- IF DURESS ALARM IS USED, AVOID USER CODES THAT BEGIN WITH THE SAME NUMBER AS A DURESS DIGIT.
- DURESS ALARM CAN ONLY USED IF YOUR SYSTEM IS MONITORED BY A CENTRAL STATION.

## MEDICAL ALARM

Your system may have been setup with a Medical Alarm. This type of alarm can be used to summon assistance for the elderly or infirm who are living alone. A Medical Alarm is most effective if the system is monitored by a Central Monitoring Station.

Medical Alarms can be used in two ways:

1. **INSTANT MEDICAL ALARM:** Immediately sound the sirens and send a Medical Alarm report to the Central Monitoring Station. (In this case, the Medical Alarm Delay is set at zero hours).
2. **INACTIVITY MEDICAL ALARM:** The Medical Alarm is reported if the Medical Alarm button is NOT pressed within the pre-programmed *Medical Alarm Delay*. (In this case, the Medical Alarm Delay is set between 1 and 24 hours).

### INSTANT MEDICAL ALARM

#### OPERATION

1. If the Medical Alarm Delay is not being used, simply press the designated Medical Alarm button.
2. If the Medical Alarm Delay *is* being used, an instant Medical Alarm can be sent by pressing the button twice within 12 seconds. On the first

press, the keypad/s will beep once per second during the 12 second period. On the second press, the keypad/s will beep fast to indicate that the Medical Alarm has been reported.

### INACTIVITY MEDICAL ALARM

#### OPERATION

The Inactivity Medical Alarm can be used to summon assistance if a person has become incapacitated and is not able to press their Medical Alarm button.


For example, if the Medical Alarm Delay is set for 24 hours, the Medical Alarm will be triggered if the button is not pressed every 24 hours. (Effectively, it is an, "I'm OK", button).

When 20 minutes of the Medical Alarm Delay time remains, and the Medical Alarm button has *not* been pressed, the keypad/s will beep for 10 seconds as a reminder.

As a final warning that the Medical Alarm delay is due to expire, the keypad/s will beep continuously during the final 10 minutes.

### MEDICAL ALARM BUTTON

The Medical Alarm button can be setup to take the place of the keypad Panic button or it may be a separate button. This must be determined by your installer.

Medical alarm is number **7** in the  view.  
SYSTEM

## FIRE ALARM

Your system may have smoke detectors connected to 24 hour Fire inputs. If Fire inputs are enabled, the alarm indication is by the Fire icon on the keypad.



Fire inputs may be programmed to sound sirens or report alarms, (if your system is monitored by a Central Monitoring Station), or other actions as setup by your installer.

# VIEW ALARMS



The VIEW menu can be used at any time to display the status of Zone, Tamper, System and Power inputs.

The status of these inputs can be displayed “live” as it happens, or as a previous event in Memory mode.

## HOW TO VIEW

Repeated presses of the VIEW button will cycle viewing of Zone, Tamper, System and Power sub-menus.

Press... [Repeat presses]



ZONE TAMPER SYSTEM POWER MEMORY

Or, each sub-menu can be directly viewed using the following shortcuts:

- ZONE: 1
- TAMPER: 2
- SYSTEM: 3
- POWER: 4
- MEMORY: 6

## DEFAULT VIEW



The display always shows the zone menu by default.

It will automatically revert back to the ZONE menu after eight seconds if left in any other view menu.

---

To view Zones Press... 1

The zone indicators 1~24 will show the state of the 24 zones and possibly one or more other icons flashing to indicate other alarms.

---

To view Tampers Press... 2

Zone indicators will show the state of the four Tamper inputs:

**TAMPER 1:** External Tamper. This could include the external siren cover. Check with your installer.

**TAMPER 2:** Control Panel Tamper.

**TAMPER 3:** Zone Input Tamper.

**TAMPER 5:** Radio Interface Tamper.

---

To view System Press... 3

Zone indicators will show the state of the eight System inputs:

**SYSTEM 1:** Keyswitch Panic

**SYSTEM 2:** Dialler line fault

**SYSTEM 3:** Keypad connection fault

**SYSTEM 4:** Control panel fault

**SYSTEM 5:** Duress Alarm

**SYSTEM 6:** Panic Alarm

**SYSTEM 7:** Medical Alarm

**SYSTEM 8:** User Code Alarm

---

To view Power Press... 4

Zone indicators will show the state of the six Power alarms:

**POWER 1:** Mains power failure

**POWER 2:** Control panel backup battery is low

**POWER 3:** DC supply failure (Call your installer)

**POWER 4:** Zone reference power failure (Call your installer)

**POWER 9:** Radio device battery low. (Zone indicators 1~8 will show which device)

**POWER 0:** Radio Key battery low. (Zone indicators 1~8 will show which Radio Key)






The VIEW MEMORY menu can be accessed at any time, but especially when the MEMORY icon is flashing to indicate there is a new alarm in memory.

## HOW TO VIEW MEMORY


When in the VIEW MEMORY menu, repeated presses of the VIEW button will sequentially display the past 50 events in memory.

To view Memory, Press...  

or Press...  [Repeat presses] when the MEMORY icon is flashing.















At each step, the keypad icons will display past events. The Zone, Tamper, System and Power icons will indicate what type of events are being displayed.

Memory is displayed backwards from most recent event to the end of memory.

Press  to exit the Memory menu.

## MEMORY MODE

### EVENTS INDICATED BY KEYPAD ICONS:

| ICON   | EVENT                  |
|--|------------------------|
| <br>MEMORY                  | Events are from memory |
|  and <b>1~24</b> [flashing] | Zone alarms            |
|  and <b>1~5</b>             | Tamper alarms          |
|  and <b>1~8</b>             | System alarms          |
|  and <b>1~0</b>             | Power alarms           |
|  and <b>1~24</b> [flashing] | Fire Zone alarm        |
|                             | Arm                    |
|                             | Disarm                 |
|  [slow flash]               | Monitor Mode           |
|                             | Area 1 Arm             |
|                           | Area 2 Arm             |
|                           | Area 3 Arm             |
|  [slow flash]             | Area 1 Monitor Mode    |
|  [slow flash]             | Area 2 Monitor Mode    |

Also see Keypad Display Table, page 6

# MEMORY VIEWING EXAMPLES

---

Examples of how to view Memory and the types of events that might be shown.



Panel is Disarmed  
(All zones are sealed)

Press... **VIEW** **6** **E**




Most recent event:  
- Zone 2 alarm

Press... **VIEW**



Next most recent event:  
- Panel was Armed

Press... **VIEW**

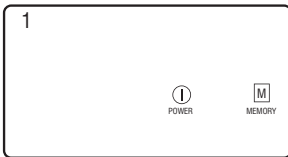

Next most recent event:  
- Mains power failure

Press... **VIEW**



...etc...Up to 50 events in memory  
Or press E anytime to exit Memory mode

Zones and other inputs can be Excluded so that it does not generate alarms. EXCLUDE is a method of temporarily disabling an input.

When zones have been Excluded, the EXCLUDE icon flashes continuously while the panel is Disarmed and also when Armed.

Zones can only be Excluded when the panel is Disarmed.

Zone Exclude IS **not permanent**. Excluded zones are automatically INCLUDED next time the panel is Disarmed.

Zones can be manually included by the same method as Excluding. In Exclude mode, simply use the [NUMBER] (E) sequence to turn OFF the zone lights to be Included.

## TO ENTER EXCLUDE MODE

Press... (EXCLUDE) [CODE] (E)

...or (EXCLUDE) (E) (If Shortcut Exclude is enabled)

## TO EXCLUDE ZONES

( and  will be on) Press... [ZONE NUMBER] (E) [ZONE NUMBER] (E) ...etc

The selected Zone numbers will turn on.

## TO EXCLUDE TAMPER ALARMS

Press... (EXCLUDE) (2) (E) ( and  will be on) [TAMPER NUMBER] (E) ...etc

The selected Tamper numbers will turn on.

## TO EXCLUDE SYSTEM ALARMS

Press... (EXCLUDE) (3) (E) ( and  will be on) [SYSTEM NUMBER] (E) ...etc

The selected System numbers will turn on.

## TO EXCLUDE POWER ALARMS

Press... (EXCLUDE) (4) (E) ( and  will be on) [POWER NUMBER] (E) ...etc


The selected Power numbers will turn on.

## TO EXIT EXCLUDE MODE

Press... (EXCLUDE) (E) ( will flash while Disarmed and Armed)

## AUTOMATIC ZONE TEST

This is an option that helps avoid the situation of a zone sensor going faulty or being disconnected without it being noticed.

When Automatic Zone Test is enabled by your installer, a count is kept of the number of times the panel is Armed and Disarmed. Any zone which has failed to detect anything over the past 20 Armings is recorded and the  indicator also lights up.

To find out which zones have been dormant:

Press...  

...or   

*(If Two Button Keypad Operation is enabled)*

The zone indicators show which zones need to be checked. To do this, walk test the zones in question. The zone indicators which were on should now be flashing. Any which are still on and not flashing need to be checked by a service person.

To exit View test:


Press...  

## SIREN TEST

Siren Test allows the user to manually test all audible and visual outputs without alarming the panel.

Press... [CODE]  The  icon will turn on.

Press the keys below to operate each output. Press the same key to turn the output off. Pressing any other key will test that output and cancel the current output.

Press...  To exit Siren test mode.

| KEY | INDICATOR | OUTPUT                    |
|-----|-----------|---------------------------|
| 1   | 1         | SIREN A, Tone 1           |
| 2   | 2         | SIREN B, Tone 1           |
| 3   | 3         | RESET (internal screamer) |
| 4   | 4         | STROBE                    |
| 5   | 5         | AUX 1                     |
| 6   | 6         | AUX 2                     |
| 7   | 7         | KEYPAD BEEPS              |
| 8   | 1         | SIREN A, Tone 2           |
| 9   | 2         | SIREN B, Tone 2           |

## PROGRAM OPTIONS TABLE

| <b>OPTION</b>             | <b>OPTION No</b> | <b>FACTORY<br/>DEFAULT</b> | <b>RANGE</b>  | <b>PROGRAMMED</b> |
|---------------------------|------------------|----------------------------|---------------|-------------------|
| User Code 1 (Master Code) | <b>P1E</b>       |                            | 3 to 6 digits |                   |
| User Code 2               | <b>P2E</b>       |                            | 3 to 6 digits |                   |
| User Code 3               | <b>P3E</b>       |                            | 3 to 6 digits |                   |
| User Code 4               | <b>P4E</b>       |                            | 3 to 6 digits |                   |
| User Code 5               | <b>P5E</b>       |                            | 3 to 6 digits |                   |
| User Code 6               | <b>P6E</b>       |                            | 3 to 6 digits |                   |
| User Code 7               | <b>P7E</b>       |                            | 3 to 6 digits |                   |
| User Code 8               | <b>P8E</b>       |                            | 3 to 6 digits |                   |
| User Code 9               | <b>P9E</b>       |                            | 3 to 6 digits |                   |
| User Code 10              | <b>P10E</b>      |                            | 3 to 6 digits |                   |
| User Code 11              | <b>P11E</b>      |                            | 3 to 6 digits |                   |
| User Code 12              | <b>P12E</b>      |                            | 3 to 6 digits |                   |
| User Code 13              | <b>P13E</b>      |                            | 3 to 6 digits |                   |
| User Code 14              | <b>P14E</b>      |                            | 3 to 6 digits |                   |
| User Code 15              | <b>P15E</b>      |                            | 3 to 6 digits |                   |
| User Code 16              | <b>P16E</b>      |                            | 3 to 6 digits |                   |
| User Code 17              | <b>P017E</b>     |                            | 3 to 6 digits |                   |
| User Code 18              | <b>P018E</b>     |                            | 3 to 6 digits |                   |
| User Code 19              | <b>P019E</b>     |                            | 3 to 6 digits |                   |
| User Code 20              | <b>P020E</b>     |                            | 3 to 6 digits |                   |
| User Code 21              | <b>P021E</b>     |                            | 3 to 6 digits |                   |
| User Code 22              | <b>P022E</b>     |                            | 3 to 6 digits |                   |
| User Code 23              | <b>P023E</b>     |                            | 3 to 6 digits |                   |
| User Code 24              | <b>P024E</b>     |                            | 3 to 6 digits |                   |
| User Code 25              | <b>P025E</b>     |                            | 3 to 6 digits |                   |
| User Code 26              | <b>P026E</b>     |                            | 3 to 6 digits |                   |
| User Code 27              | <b>P027E</b>     |                            | 3 to 6 digits |                   |
| User Code 28              | <b>P028E</b>     |                            | 3 to 6 digits |                   |
| User Code 29              | <b>P029E</b>     |                            | 3 to 6 digits |                   |
| User Code 30              | <b>P030E</b>     |                            | 3 to 6 digits |                   |
| Entry Delay Time          | <b>P17E</b>      | 20 seconds                 | 1 to 99 sec   |                   |
| Exit Delay Time           | <b>P18E</b>      | 60 seconds                 | 1 to 99 sec   |                   |

# PROGRAMMING

## PROGRAM MODE

Various system options can be programmed by the user. These options can only be accessed from User Program Mode.

User Codes 1 to 30  
Entry Delay Time  
Exit Delay Time

For all other programming changes, talk to your installer.

The panel will automatically exit User Program Mode if no buttons are pressed within a one minute period.

### TO ENTER PROGRAM MODE:

Press... **(P)** [MASTER CODE] **(E)**

### TO EXIT PROGRAM MODE:

Press... **(P)** then **(E)**



[NN] = The Option Number of the code being programming





## PROGRAMMING USER CODES

User codes are the P.I.N. codes used to operate various panel functions, especially Arming and Disarming. There are 30 User Codes and each can be 3 to 6 digits long.

User Code 1 is always a Master Code. User Codes 2 to 30 can be programmed to any of these types:

ORDINARY  
DISABLED  
ADMINISTRATOR  
AREA  
MASTER

When programming codes, the User Code type

is displayed by the icons:    

If User Code 1 was used to enter Program Mode, the digits of any existing codes will be displayed when programming a User Code.

### ORDINARY CODE

An Ordinary Code is for system's configured without Areas. Allows full access to the panel except for entry to Program Mode.

To Program an Ordinary Code:

**(P)** [NN] **(E)** [CODE] **(E)** [CODE] **(E)**

The     icons will be ON.

### DISABLED CODE

Any Code except the Master Code can be taken out of service by programming its first digit to be zero.

To Disable a Code:

**(P)** [NN] **(E)** 0 [CODE] **(E)** 0 [CODE] **(E)**

The     icons will be ON.

## ADMINISTRATOR CODE

An Administrator Code is able to Arm and Disarm all Areas of a Partitioned system, but it is not allowed entry to Program Mode. Programming is the same as an Ordinary Code.

To Program an Administrator Code:

**P** [NN] **E** [CODE] **E** [CODE] **E**

The     icons will be ON.

## AREA CODE

An Area Code is a code which only has access to the Area assigned to that code.

The user does not need special instructions for Arming and Disarming.


ARM [CODE] E Arms *only* the assigned Area.

[CODE] E Disarms *only* the designated Area.

See page 11 for details.

To Program an Area Code assigned to **AREA1**:

**P** [NN] **E** **1** **E** [CODE] **E** [CODE] **E**

The  icon will be ON.


To Program an Area Code assigned to **AREA2**:

**P** [NN] **E** **2** **E** [CODE] **E** [CODE] **E**

The  icon will be ON.

To Program an Area Code assigned to **AREA3**:

**P** [NN] **E** **3** **E** [CODE] **E** [CODE] **E**

The  icon will be ON.

## MASTER CODE

A Master Code is able to Arm and Disarm all Areas of a Partitioned system and is allowed entry to Program Mode.

User Code 1 is always a Master Code, but all other codes can be programmed as Master Codes.

To Program a Master Code:

**P** [NN] **E** **0** **E** [CODE] **E** [CODE] **E**

The     icons will be FLASHING.

# PROGRAMMING TIMERS

---

## ENTRY DELAY TIME

Entry Delay Time applies to Delay Zones and gives you time to enter the premises and Disarm without causing an alarm.

When a Delay zone is triggered, the panel will go into alarm state if it is not Disarmed within the Entry Delay time.

The Entry Delay Time can be programmed in the range of 1 to 99 seconds.

To Program Entry Delay Time:

**(P)** **(1)** **(7)** **(E)** [1~99] **(E)**

**Example: Programming the Entry Delay Time to be 35 seconds.**

1. Press... **(P)** **(1)** **(7)** **(E)**
2. *The existing Entry Delay Time is displayed*
3. Press... **(3)** **(5)** **(E)** *Enters the new time*

## EXIT DELAY TIME

On Arming the panel, Exit Delay Time gives you time to leave the premises without causing an alarm.

Exit Delay Time applies to all zones (except 24 hour zones).

The Exit Delay Time can be programmed in the range of 1 to 99 seconds.

To Program Exit Delay Time:

**(P)** **(1)** **(8)** **(E)** [1~99] **(E)**

**Example: Programming the Exit Delay Time to be 90 seconds.**

1. Press... **(P)** **(1)** **(8)** **(E)**
2. *The existing Exit Delay Time is displayed*
3. Press... **(9)** **(0)** **(E)** *Enters the new time*



# WIRELESS PRODUCTS

## RADIO ACCESSORIES

Ask your installer about the range Ness radio devices for the optional extra convenience of wireless remote control and wireless detection.

Operating your Ness security system can be as convenient as opening your car door. The Ness Radio Key™ provides the benefits of separate ON, OFF and PANIC buttons in a slim, waterproof remote control.

\* Ness radio products require a Ness Radio Interface (100-200) to be fitted to the control panel.



Part No.  
100-001

### NESS RADIO KEYPAD

A unique fully portable radio keypad. The Ness Radio Keypad provides totally wireless Arming/Disarming of the Ness D8, D16 & D24 control panels.

Also operates Monitor mode and Panic when used with the Ness D16, D24 panels.

The Ness radio Keypad is suitable for use as a portable keypad or for adding an extra keypad in areas where it is not possible to install wires.



Part No.  
100-662

### NESS RADIO REED SWITCH

Ness Radio Reed Switch for wireless door and window protection.



Part No.  
100-664

### NESS RADIO KEY 3 BUTTON

Fully waterproof, ultra slim 3 button Radio Key for remote control of the D24 control panel.

With separate buttons for ON (Arm), OFF (Disarm) and PANIC functions.



Part No.  
100-665

### NESS RADIO KEY PENDANT

Fully waterproof pendant style transmitter can be used as a portable wireless Panic button.

Supplied with a neckchain as well as wristwatch straps. Ideal for use as a medical alarm for the elderly or infirm. (Central Station Monitoring is especially recommended when used for medical alarm purposes).




Part No.  
100-663

### NESS RADIO PIR

Ness Radio PIR (Passive Infrared) motion detector for wireless motion detection.

Can be used in combination with Ness hardwired detectors in areas where it is not possible to install wires.

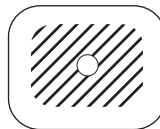

Part No.  
100-203

### NESS RADIO SMOKE DETECTOR

Radio Smoke Detector using Ionisation smoke detection technology. With on board sounder. A single battery powers the smoke detector and the transmitter.

# INSTALLATION RECORD









**NESS D16**  
ALARM CONTROL PANEL

|                             |                 |
|-----------------------------|-----------------|
| Date purchased:             | Date installed: |
| Installation Company: _____ |                 |
| Telephone: _____            |                 |
| Monitoring Company: _____   |                 |
| Telephone: _____            |                 |

| ZONE LIST | DEVICE TYPE | DESCRIPTION |
|-----------|-------------|-------------|
| Zone 1    |             |             |
| Zone 2    |             |             |
| Zone 3    |             |             |
| Zone 4    |             |             |
| Zone 5    |             |             |
| Zone 6    |             |             |
| Zone 7    |             |             |
| Zone 8    |             |             |
| Zone 9    |             |             |
| Zone 10   |             |             |
| Zone 11   |             |             |
| Zone 12   |             |             |
| Zone 13   |             |             |
| Zone 14   |             |             |
| Zone 15   |             |             |
| Zone 16   |             |             |
| Zone 16   |             |             |
| Zone 17   |             |             |
| Zone 18   |             |             |
| Zone 19   |             |             |
| Zone 20   |             |             |
| Zone 21   |             |             |
| Zone 22   |             |             |
| Zone 23   |             |             |
| Zone 24   |             |             |

To **ARM**:

  
...or    
...or   







---

To **DISARM** or reset alarms:

---

To Arm **MONITOR** mode:

  
...or    
...or   

---

To exit **MONITOR** mode:

---

To **EXCLUDE** zones:

    
...or  

then:




    (Up to 24 zones)

To exit **EXCLUDE** mode:

---

**PANIC** alarm:

 Press and hold for 1 second  
...or  



---

**VIEW** menu:

 **[Repeat presses]**

Cycles viewing of      menus  
ZONE TAMPER SYSTEM POWER MEMORY

To exit **VIEW** mode:

 (Reverts to normal  view)

---

